

Cleveland 1-800-362-9267  
Canton 1-877-258-7601  
Toledo 1-800-860-3352  
www.chasehipps.com



# EcoQuip 2™ EQm Vapor Abrasive Blast System

3A3489R

EN

***Vapor abrasive blast system for coating removal and surface preparation.  
For professional use only.***


*175 psi (12.06 bar, 1.2 MPa) Maximum Working Pressure*

See page 3 for models and approval information.



## **Important Safety Instructions**

Read all warnings and instructions in this manual before using this equipment.  
Save these instructions.

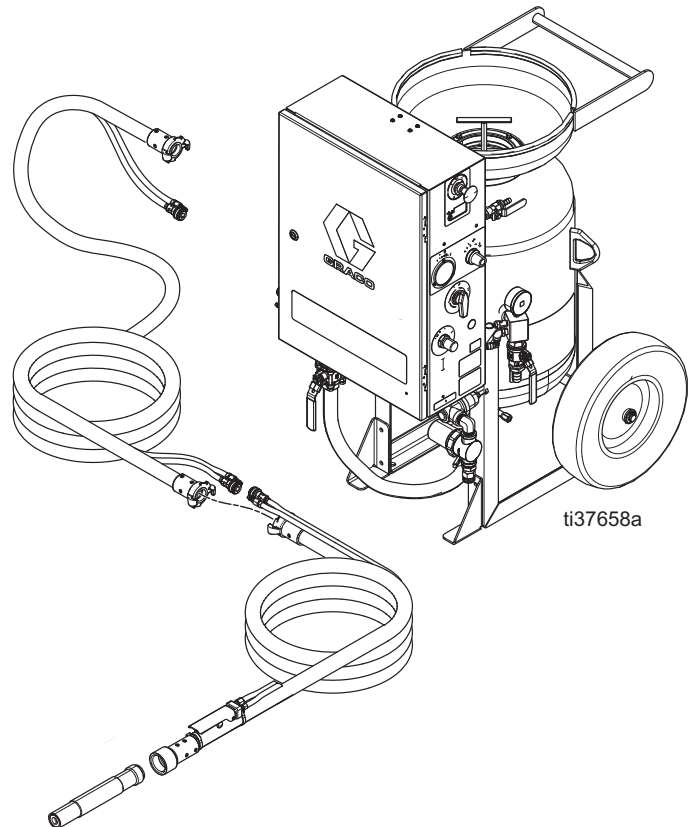

# Contents

<b>Related Manuals</b> .....	<b>3</b>	<b>Troubleshooting</b> .....	<b>26</b>
<b>Models</b> .....	<b>3</b>	<b>Repair</b> .....	<b>32</b>
<b>Packages</b> .....	<b>3</b>	Replace the DataTrak Battery .....	32
<b>Warnings</b> .....	<b>4</b>	Replace the DataTrak Fuse .....	33
<b>Component Identification</b> .....	<b>7</b>	Replace the Pinch Hose .....	34
MediaTrak Controls .....	8	<b>Parts</b> .....	<b>35</b>
<b>Installation</b> .....	<b>9</b>	EQm Parts .....	35
Grounding (ATEX systems only) .....	9	Enclosure Box Parts .....	37
Lifting the System .....	9	Enclosure Parts (EQm only) .....	41
Blast Hose Selection .....	10	Blast Hoses .....	43
Blasting on Higher Surfaces .....	10	<b>Vapor Abrasive Blast Systems and</b>	
Pinch Hose Inspection .....	10	<b>Accessories</b> .....	<b>45</b>
Connect the Blast Hose and Air Hose .....	11	50 ft (15 m) Blast Hoses with Control	
Connect the Water Hose .....	12	Hose/Cable .....	45
<b>Setup</b> .....	<b>13</b>	50 ft (15 m) Blast Hoses without Control	
Fill Pot with Abrasive Media .....	13	Hose/Cable .....	45
Pressurize the Pot .....	14	Control Hoses/Cable with Blast Hose .....	45
<b>Operation</b> .....	<b>15</b>	Nozzles .....	46
Pressure Relief Procedure .....	15	Other Accessories .....	46
Adjust Blast Pressure .....	16	Common Spare Parts .....	46
Adjust Abrasive Media .....	17	<b>Tubing Schematic</b> .....	<b>48</b>
Set the Abrasive Metering Value .....	18	<b>Dimensions</b> .....	<b>49</b>
Optimize the Abrasive Metering Value .....	18	EQm Models .....	49
General Application Guides .....	19	<b>Technical Specifications</b> .....	<b>50</b>
Nozzle Selection Guide .....	20	EQm .....	50
Blast Pressure vs. Air Flow Guide .....	20	California Proposition 65 .....	51
Use the Wash Feature .....	21	<b>Graco Standard Warranty</b> .....	<b>52</b>
Refill the Pot with Abrasive .....	22		
Standby .....	22		
Shutdown .....	23		
Drain the Pot .....	24		
Winterize the Equipment .....	25		
Use the Water Dose Meter .....	25		

## Related Manuals

Manual in English	Description
3A7467	EcoQuip 2 EQs, EQc, and EQ Trailer Unit Vapor Abrasive Blast System
313840	DataTrak™
333397	Pump
335035	Air Inlet Kit
309474	Low Pressure Fluid Regulators
3A3838	Nozzle Pressure Verification Kit
3A3839	Nozzle Extension Handle Kit
3A3970	Water Dose Kit
3A3971	Mobile Water Tank Kit

## Models

EcoQuip 2 Vapor Blast Systems				
Model	Part	Blast Control		Approvals
		Pneumatic	Electric	
EQm	262950	✓	✓	CE
	262951	✓		CE Ex II 2 G Ex ia h IIA T3 Gb X








## Packages

**NOTE:** Packages include a blast hose with electric or pneumatic blast controls and a tool kit.

EcoQuip 2 Vapor Blast System Packages						
Model	Package	Included System	Blast Control		Blast Hose	Nozzle
			Pneumatic	Electric		
EQm	262952	262950	✓		100 ft, 1.00 in. ID	#7 Standard
	262953			✓		
	262954	262951	✓			

# Warnings

The following warnings are for the setup, use, grounding, maintenance, and repair of this equipment. The exclamation point symbol alerts you to a general warning and the hazard symbols refer to procedure-specific risks. When these symbols appear in the body of this manual or on warning labels, refer back to these Warnings. Product-specific hazard symbols and warnings not covered in this section may appear throughout the body of this manual where applicable.

 <h1 style="margin: 0;">WARNING</h1>	
 	<p><b>SPECIFIC CONDITIONS OF USE (ATEX systems only)</b></p> <ul style="list-style-type: none"> <li>• Ground all equipment in the work area. See <b>Grounding (ATEX systems only)</b> Instructions.</li> <li>• All label and marking material must be cleaned with a damp cloth (or equivalent).</li> </ul>
 	<p><b>DUST AND DEBRIS HAZARD</b></p> <p>Use of this equipment can result in the release of potentially harmful dust or toxic substances from the abrasive being used, the coatings being removed, and the base object being blasted.</p> <ul style="list-style-type: none"> <li>• For use only by sophisticated users familiar with applicable governmental safety and industrial hygiene regulations.</li> <li>• Use equipment only in a well-ventilated area.</li> <li>• Wear a properly fit-tested and government approved respirator suitable for the dust conditions.</li> <li>• Follow local ordinances and/or regulations for disposal of toxic substances and debris.</li> </ul>
 	<p><b>PRESSURIZED EQUIPMENT HAZARD</b></p> <p>Fluid from the equipment, leaks, or ruptured components can splash in the eyes or on skin and cause serious injury.</p> <ul style="list-style-type: none"> <li>• Follow the <b>Pressure Relief Procedure</b> when you stop spraying/dispensing and before cleaning, checking, or servicing equipment.</li> <li>• Tighten all fluid connections before operations the equipment.</li> <li>• Check hoses, tubes, and couplings daily. Replace worn or damaged parts immediately.</li> </ul>

# ! WARNING



## EQUIPMENT MISUSE HAZARD

Misuse can cause death or serious injury.

- Do not operate the unit when fatigued or under the influence of drugs or alcohol.
- Do not exceed the maximum working pressure or temperature rating of the lowest rated system component. See **Technical Specifications** in the equipment manuals.
- Do not use this equipment without hose restraints and coupler pins installed on all air and blast hose couplings.
- Do not blast unstable objects. The high amount of fluid flow from the nozzle can potentially move heavy objects.
- Do not exceed load ratings of lift eyes.
- Do not operate equipment on or stand on an unstable support. Keep effective footing and balance at all times.
- Use fluids and solvents that are compatible with equipment wetted parts. See **Technical Specifications** in all equipment manuals. Read fluid and solvent manufacturer's warnings. For complete information about your material, request Safety Data Sheets (SDSs) from distributor retailer.
- Never use 1, 1, 1-trichloroethane, methylene chloride, other halogenated hydrocarbon solvents or fluids containing such solvents in pressurized aluminum equipment. Such use could result in a chemical reaction, with the possibility of explosion.
- Do not leave the work area while equipment is energized or under pressure.
- Turn off all equipment and follow the **Pressure Relief Procedure** when equipment is not in use.
- Check equipment daily. Repair or replace worn or damaged parts immediately with genuine manufacturer's replacement parts only.
- Do not alter or modify equipment. Alterations or modifications may void agency approvals and create safety hazards.
- Make sure all equipment is rated and approved for the environment in which you are using it.
- Use equipment only for its intended purpose. Call your distributor for information.
- Route hoses and cables away from traffic areas, sharp edges, moving parts, and hot surfaces.
- Do not kink or over bend hoses or use hoses to pull equipment.
- Keep children and animals away from work area.
- Comply with all applicable safety regulations.



## BURN HAZARD

Equipment surfaces and fluid that is heated can become very hot during operation. To avoid severe burns:

- Do not touch hot fluid or equipment.







## FIRE AND EXPLOSION HAZARD


Flammable fumes, such as solvent, in work area can ignite or explode. To help prevent fire and explosion:

- Use equipment only in well ventilated areas.
- Abrasive material exiting blast nozzle can generate sparks. When flammable liquids are used near the blast nozzle or for flushing or cleaning, keep the blast nozzle at least 20 feet (6 meters) away from explosive vapors.
- Ground all equipment in the work area. See **Grounding (ATEX systems only)** instructions (ATEX systems only).
- Keep work area free of debris, including solvent, rags and gasoline.
- Keep a working fire extinguisher in the work area.

# **WARNING**

 	<p><b>MOVING PARTS HAZARD</b></p> <p>Moving parts can pinch, cut, or amputate fingers and other body parts.</p> <ul style="list-style-type: none"> <li>• Keep clear of moving parts.</li> <li>• Do not operate equipment with protective guards or covers removed.</li> <li>• Pressurized equipment can start without warning. Before checking, moving, or servicing equipment, follow the <b>Pressure Relief Procedure</b> and disconnect all power sources.</li> </ul>
	<p><b>PERSONAL PROTECTIVE EQUIPMENT</b></p> <p>Wear appropriate protective equipment when in the work area to help prevent serious injury, including eye injury, hearing loss, inhalation of toxic fumes, and burns. Protective equipment includes but is not limited to:</p> <ul style="list-style-type: none"> <li>• Protective eyewear and hearing protection</li> <li>• Protective clothing, shoes and gloves</li> <li>• Properly fit-tested and government approved respirator suitable for the dust conditions</li> </ul>
	<p><b>RECOIL HAZARD</b></p> <p>Blast nozzle may recoil when triggered. If you are not standing securely, you could fall and be seriously injured.</p>


# Component Identification

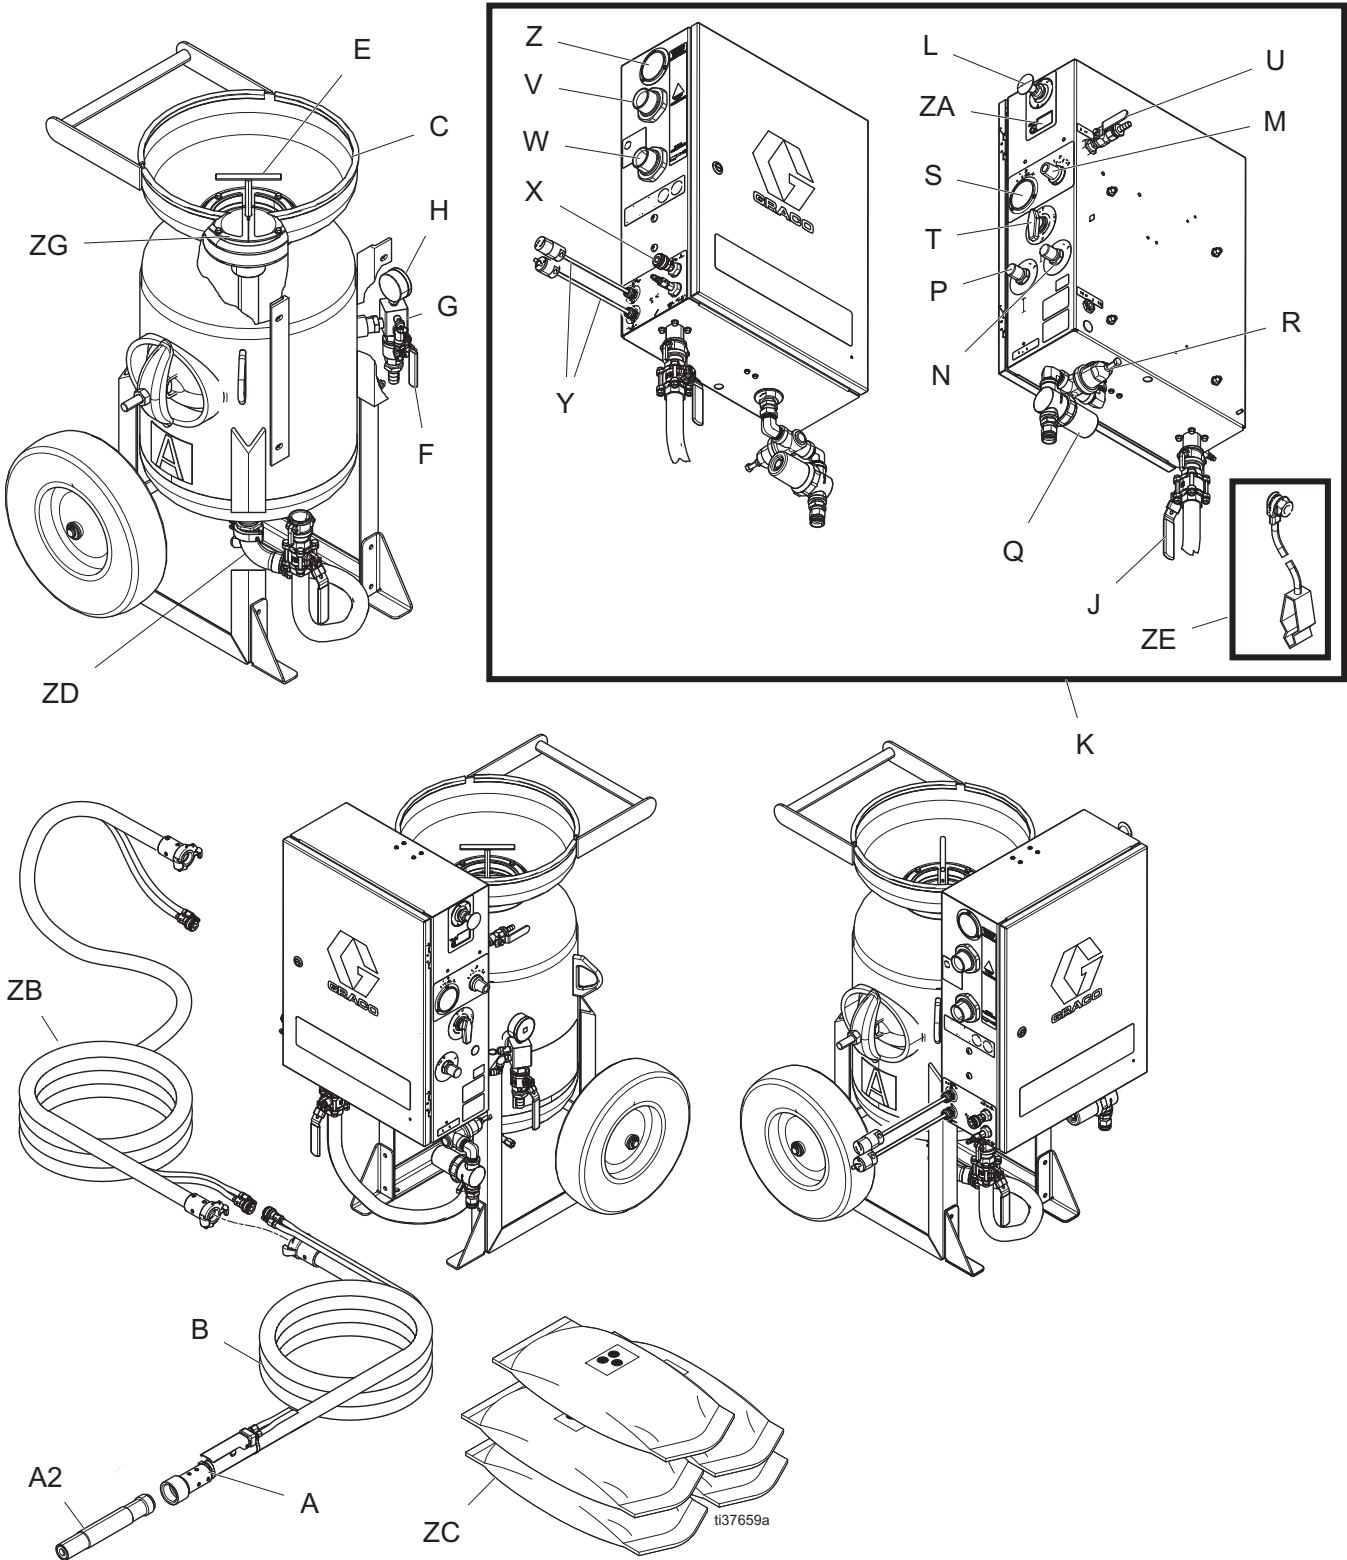

**Key:**

- A Blast Control Switch
- A2 Blast Nozzle
- B Blast Hose
- C Pot
- E Pop-up Handle
- F Pot Dump Valve
- G Pressure Relief Valve
- H Pot Pressure Gauge
- J Abrasive Ball Valve
- K Control Box
- L Emergency Stop
- M Blast Air Regulator
- N Water Dose Valve
- P Abrasive Metering Valve
- Q Water Pump Inlet Filter
- R Inlet Water Pressure Regulator
- S Blast Air Pressure Gauge
- T Selector Valve
- U Rinse Ball Valve
- V Air Supply Connection
- W Blast Connection
- X Pneumatic Control Connection
- Y Electric Control Connection (non-ATEX systems only)
- Z Supply Pressure Gauge
- ZA MediaTrak
- ZB Accessory Extension Hose
- ZC Abrasive Material
- ZD Pot Outlet Manifold
- ZE Ground Wire and Clamp (ATEX systems only)
- ZG Pop-Up Seal

## MediaTrak Controls

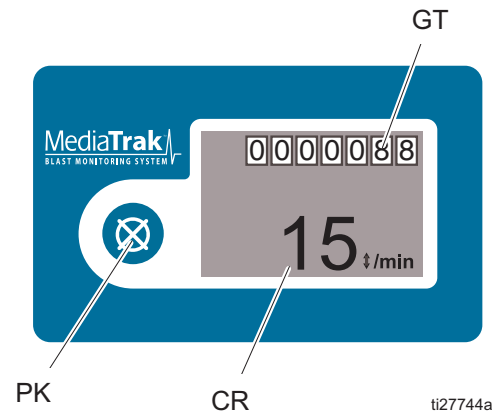

**Key:**

- PK Power Key
- CR Cycle/Rate
- GT Grand Totalizer

# Installation

## Grounding (ATEX systems only)




**Systems:** Use supplied ground wire and clamp (237686).

**Air and fluid hoses:** Use only genuine Graco conductive blast hoses with a maximum of 150 ft (45 m) combined blast hose length to ensure grounding continuity. Check the electrical resistance of the blast hoses. If the total resistance to ground exceeds 29 megaohms, replace the blast hose immediately.

**Air compressor:** Follow manufacturer's recommendations.

## Lifting the System

- Before lifting the system, drain the water tank and pot of media and water.
- Lift the system with a lift apparatus rated appropriately for the weight of the system. See **Technical Specifications**, page 50.
- Do not lift the system by the handle on the EQm pot.
- Lift the system using the lift eyes shown on the following illustration.

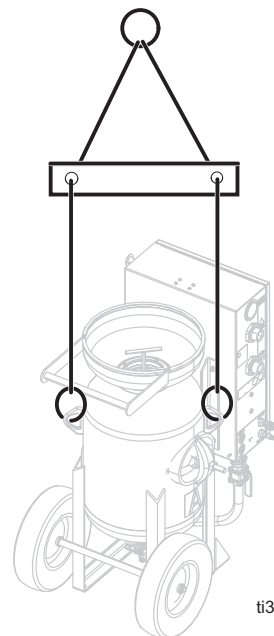

ti37663a

## Blast Hose Selection


Make sure to use the correct type of blast control. An electric or pneumatic blast control switch can be used with hose lengths less than 150 ft (45 m). Blasting with 150 ft (45 m) or more of blast hose requires the use of an electric blast control switch.

## Blasting on Higher Surfaces

### NOTICE

When blasting on a surface higher than the equipment, make sure that there is a length of blast hose on the ground equal to 10-20% of the height. The hose on the ground prevents unspent abrasive in the hose from backing up into the internal plumbing of the panel, which can cause damage to the main air regulator when the blast switch is disengaged.

For example: When blasting 50 feet (15 m) straight up, use at least 10 feet (3 m) of blast hose on the ground before the blast hose goes up to the blasting height.

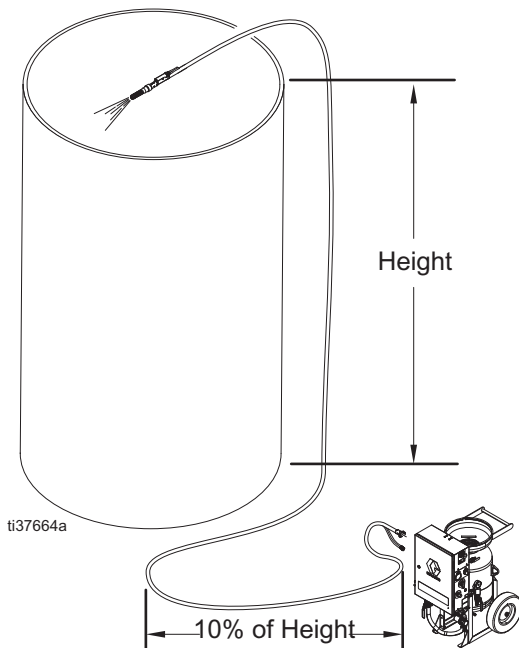

## Pinch Hose Inspection


Inspect the pinch hose at the start of each job, or monthly, looking for “bubbles” in the outer casing. If bubbles in the casing are found, replace the pinch hose (see **Replace the Pinch Hose**, page 34). Keep a spare pinch hose on the job site in case of failure. See **Vapor Abrasive Blast Systems and Accessories**, page 45.

**NOTE:** There are three main factors that can affect (diminish) the life of the pinch hose: abrasive media used (course/sharp), blast control switch trigger rate (high), and the air inlet pressure to the system (high). If your setup reflects one or more of these factors, inspect the pinch hose at the start of each job, and weekly thereafter for signs of failure (bubbling).

## Connect the Blast Hose and Air Hose




1. **ATEX models only:** Connect the grounding cable to the external ground stud on the enclosure, then connect the clamp to a true earth ground.

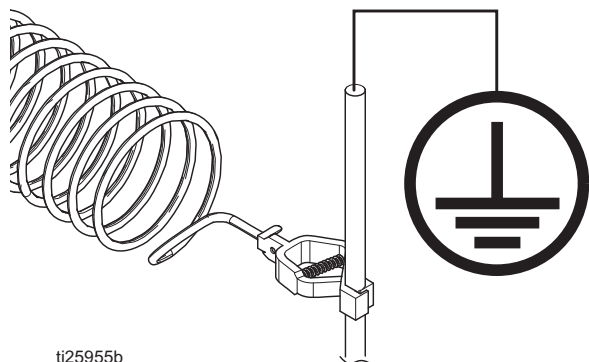


ti25955b

2. Always purge the air supply hose for 15-20 seconds before connecting the air supply hose from the compressor (or on-site compressed air source) to the panel. Make sure all debris is cleared from the hose.

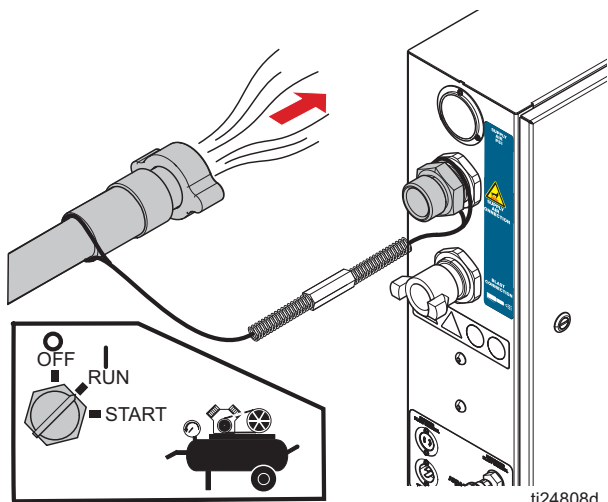

ti24808d


3. Connect an appropriately sized air supply hose to the air inlet and install coupler pins. See **Technical Specifications**, page 50.

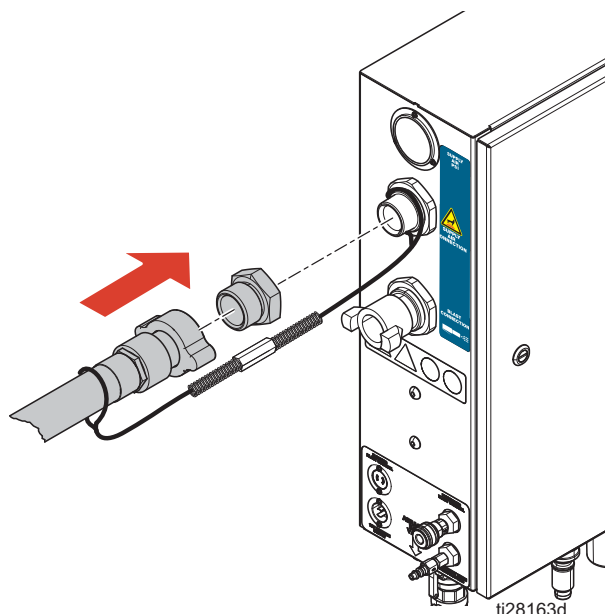

ti28163d

### NOTICE

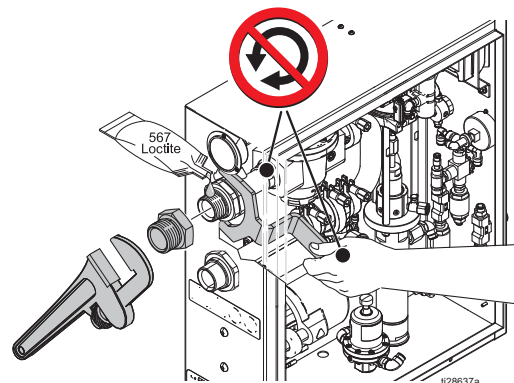


Damage to the tubing connections on the blast control can occur if the blast circuit is allowed to rotate. To avoid damage, use the supplied wrench to hold the blast circuit nut inside the enclosure while installing fittings to the air inlet and blast hose connections.




ti28637a


4. Open the compressor air supply valve (175 psi, 12.06 Bar, 1.2 MPa maximum compressor supply).

**NOTE:** Make sure the air supply meets the appropriate air flow requirements. See **Technical Specifications**, page 50.



				
<p>Failure to fully secure the blast hoses may cause hoses to detach during operation. To help prevent serious injury from flying debris, always install the blast hose restraints and coupler pins.</p>				

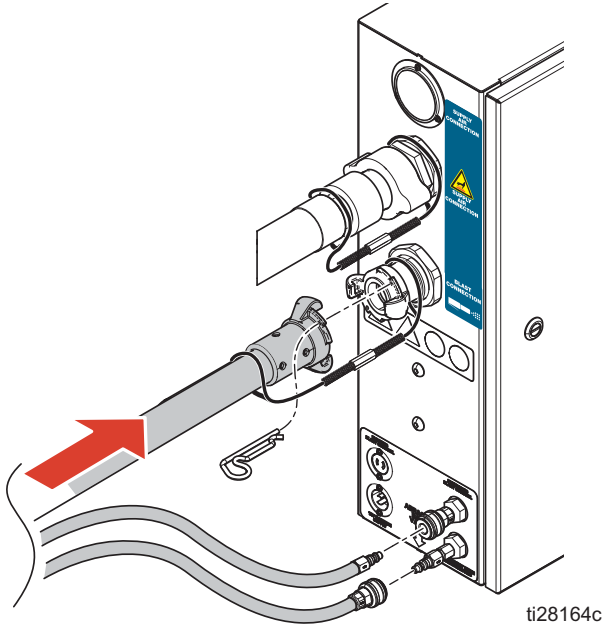5. Connect the blast hose, hose restraints, control hoses, and coupler pins.

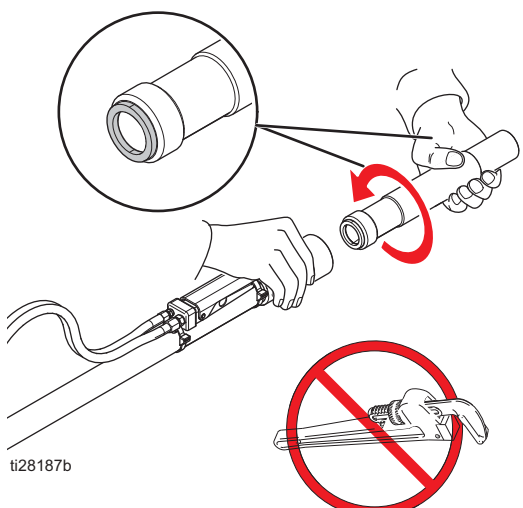


<b>NOTICE</b>	
<p>Do not use a wrench when installing the nozzle. Damage to the seal could occur. To avoid seal damage, always hand-tighten the nozzle.</p>	
	
<p>ti28187b</p>	

## Connect the Water Hose

				
---	--	--	--	--

1. Connect to a water supply hose with a minimum ID of 3/4 in. (19 mm) to the garden hose connection on the pump inlet.

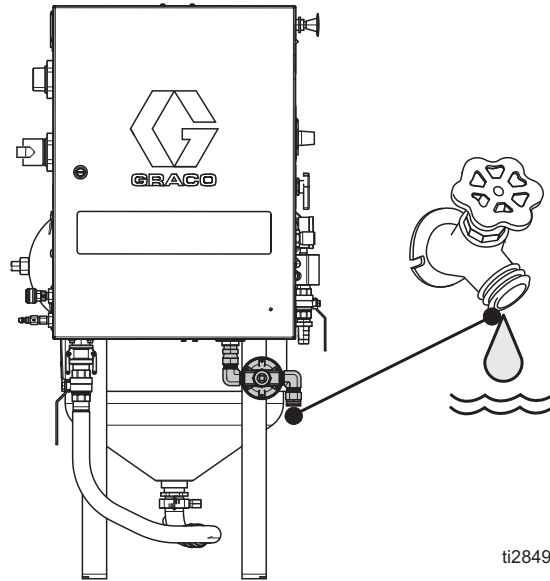

**NOTE:** The maximum water supply pressure is 100 psi (6.8 bar, 0.68 MPa). The minimum flow requirements is 3 gpm (11 lpm).

# Setup

## Fill Pot with Abrasive Media




1. Verify that the pot pressure gauge (H) reads 0 psi. If the pressure gauge does not read 0 psi, perform the **Pressure Relief Procedure** on page 15.
2. Verify that all **Installation** procedures, beginning on page 9, have been completed.
3. Close the rinse ball valve (U) and abrasive ball valve (J).
4. Turn the selector valve (T) to OFF.




ti27756a

5. Open the pot dump valve (F).

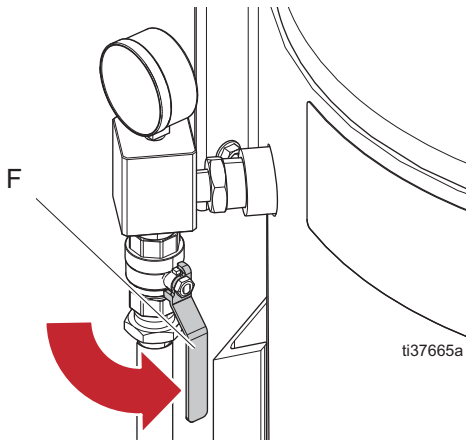

ti37665a

6. Align the pop-up handle with the pin slot, then firmly push and turn the handle 90 degrees after the pin is below the bracket slot.
7. Add 10 gallons (30 liters) of fresh water to the pot. Add abrasive material. See **Technical Specifications**, page 50, for capacity information.

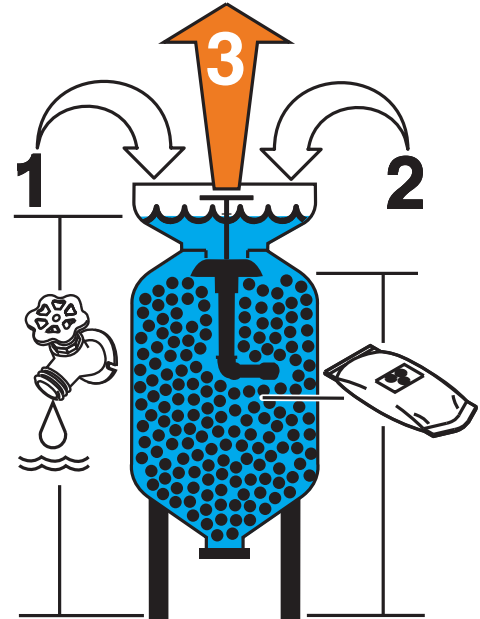

ti28243b

8. Close the pot dump valve (F).
9. Use a garden hose or the rinse hose to wash the abrasive into the pot and clear any abrasive material from the pop-up and gasket.



Make sure the water is above the pop-up seal and pop-up seal is closed. Failure to do so before pressurizing the pot can result in serious injury to the operator.


10. When the water level is above the pop-up gasket, rotate the handle to release the pop-up pin.

## Pressurize the Pot



To avoid injury to the operator, always pressurize the pot before opening the abrasive ball valve (M) or engaging the blast control switch (B).

1. Verify that the water level is above the pop-up seal and that the pop-up seal is closed.
2. Verify that the rinse valve (U), abrasive ball valve, (J), and the pot dump valve (F) are closed.
3. Disengage the emergency stop (L).

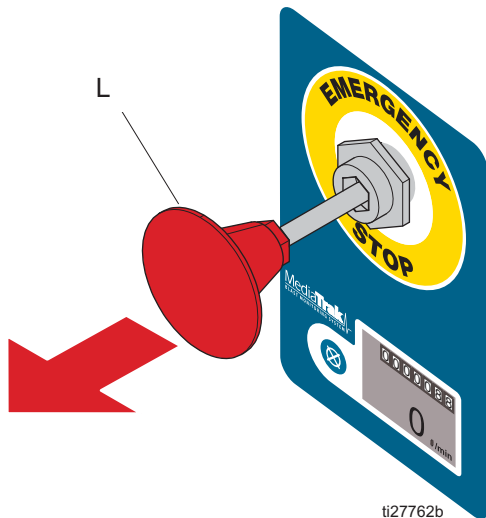

ti27762b

**NOTE:** The water pump will not work unless the Emergency Stop is disengaged.

4. Turn the selector valve (T) to BLAST



ti27757a

5. Open the abrasive metering valve (P) one half turn.
6. Verify that the pressure on the pot pressure gauge (H) has risen above 170 psi (11.7 bar, 1.17 MPA).

# Operation

<p>This equipment may introduce dust and debris into the air. To help prevent serious injury from flying debris, always wear personal protective equipment while operating the equipment.</p>			

## Pressure Relief Procedure




Follow the Pressure Relief Procedure whenever you see this symbol.

<p>This equipment stays pressurized until pressure is manually relieved. To help prevent serious injury from pressurized fluid, splashing fluid and moving parts, follow the Pressure Relief Procedure when you stop spraying and before cleaning, checking, or servicing the equipment.</p>				


1. Close the abrasive ball valve (J).

**NOTE:** If the abrasive ball valve is not closed when the supply air is shut off, gravity will cause abrasive media and water to drain from the pot (C) and into the blast hose (B).

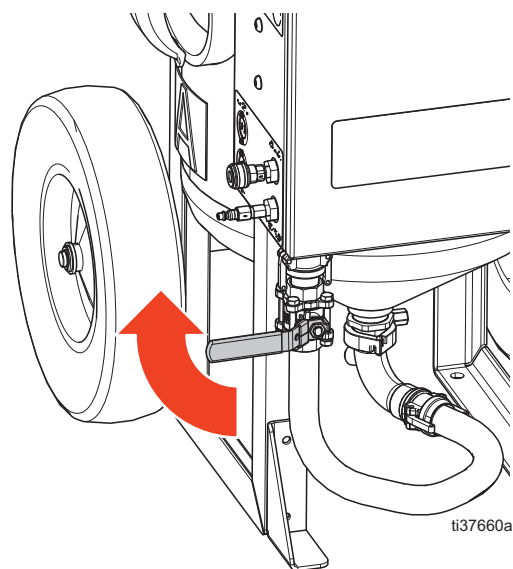


2. Close the compressor supply air valve, then turn the compressor off.


3. Engage the emergency stop (L).
4. Engage the blast control switch (A) to relieve pressure in the system.
5. Verify that the supply pressure gauge (Z) reads 0 psi. Then disconnect the air inlet hose from the system.

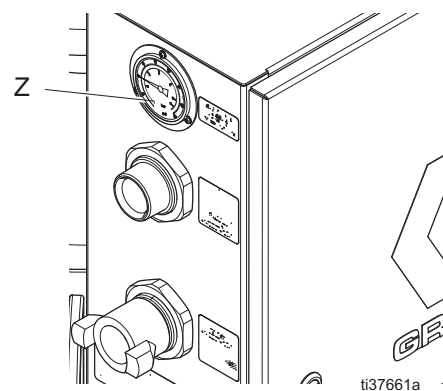

6. Turn the selector valve to BLAST.

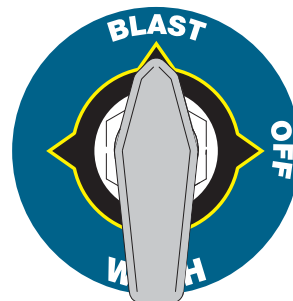

7. Open the pot dump valve (F) until the pot pressure gauge (H) reads 0 psi.

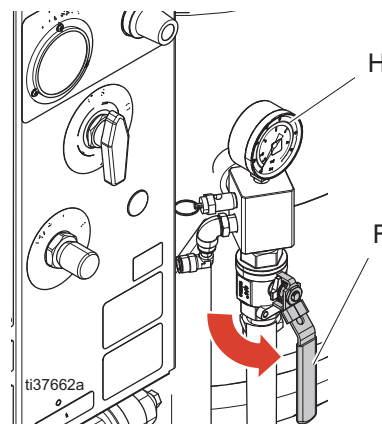


8. Close the pot dump valve (F). Turn the selector valve (T) to OFF.

## Adjust Blast Pressure



To avoid injury due to a spray from wet media from the pot, always **Pressurize the Pot**, page 14, before opening the abrasive ball valves (J) and engaging the blast control switch (A).


1. Perform the **Fill Pot with Abrasive Media** procedure on page 13.
2. Perform the **Pressurize the Pot** procedure on page 14.
3. Trigger the blast control switch (A).

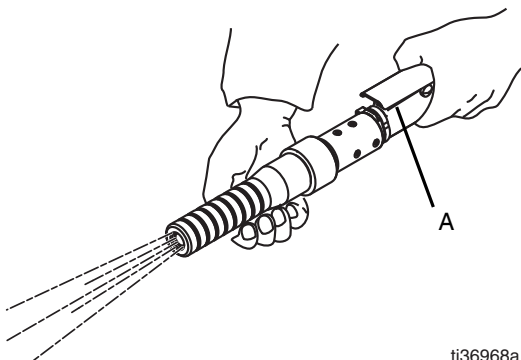

ti36968a

4. Adjust the blast air regulator (M) and set the blast air pressure to a maximum of 175 psi (12.06 bar, 1.2 MPa).

**NOTE:** Do not increase directly to blast pressure. Always set below the desired pressure, then increase to the actual setpoint.

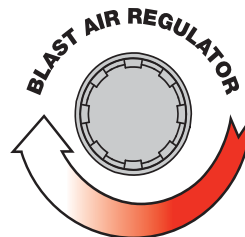


ti36969a

5. Disengage the blast control switch (A).

## Adjust Abrasive Media



1. Perform the **Adjust Blast Pressure** procedure on page 16.
2. Open the abrasive media ball valve (J). Trigger the blast control switch (A).

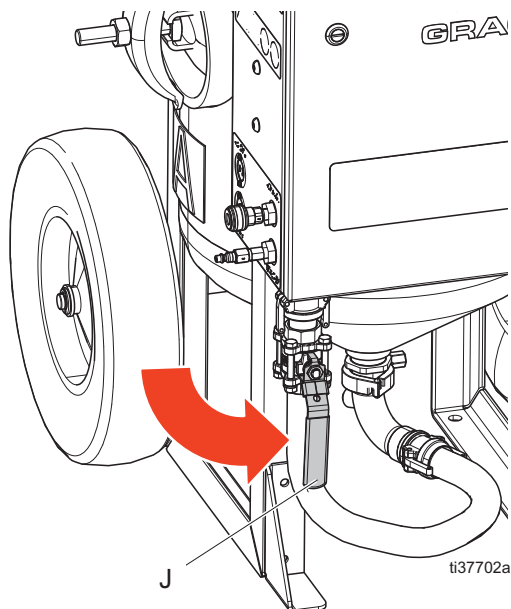

3. Turn on the MediaTrak display (PK).
4. Slowly adjust the abrasive meter valve (P) to the desired flow of abrasive media.

**NOTE:** You may have to wait 1-2 minutes for the abrasive material to reach the nozzle.

**NOTE:** Use a piece of test material similar to what you will be blasting. Always start as gently as possible and then increase the blast force as necessary to clean without doing any damage to the substrate.

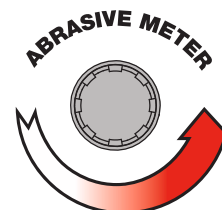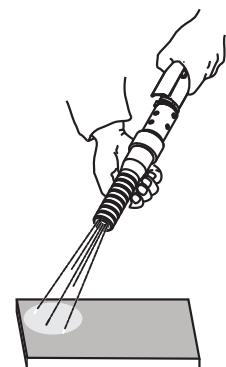

ti36971a

## Set the Abrasive Metering Value

The optimal setpoint of the abrasive metering valve and corresponding MediaTrak CPM value varies significantly depending on application and user desired performance. The **General Application Guides**, page 19, describe the generally accepted range of CPM setpoints based on the substrate and blast pressure setpoint. The gray highlighted area illustrates the typical range of blast pressure setpoints and their corresponding CPM setpoints for that substrate.

To find the recommended CPM setpoint, select the table that most closely matches the substrate that is to be blasted. Determine the blast pressure setpoint based on the media that is being used, and the desired surface profile to be achieved. Then, use the corresponding lines on the chart to select the appropriate CPM setpoint.

For inexperienced users, select a blast pressure near the low end of the highlighted range. Increase blast pressure and CPM until the desired profile and removal rate are achieved.

## Optimize the Abrasive Metering Value

To optimize performance, use the High Production or Media Efficient lines on the charts. CPM setpoints near the High Production lines will yield the highest removal rates, and the highest media consumption rates. To maximize removal rate regardless of media consumption, use the highest possible blast pressure and set the CPM to the highest achievable value that produces a consistent pattern. The CPM setpoint is too high if the flow from the nozzle starts to sputter.


CPM setpoints near the Media Efficient line will use the lowest amount of media. To minimize cleanup and media usage, use a setpoint closer to this line. Generally, removal rates will be less than average when setting the CPM according to this line.

The charts on the following page are only guidelines. They were developed using garnet media in the 30-80 mesh range. Coarser media will produce a deeper profile, but will require higher CPM setpoints to yield similar removal rates to the setpoints shown in the tables. Finer media will yield higher removal rates, but will not produce as deep of a profile.

Fine tuning and experimentation are necessary to optimize performance for each application.

See the **General Application Guides**, page 19.

# General Application Guides

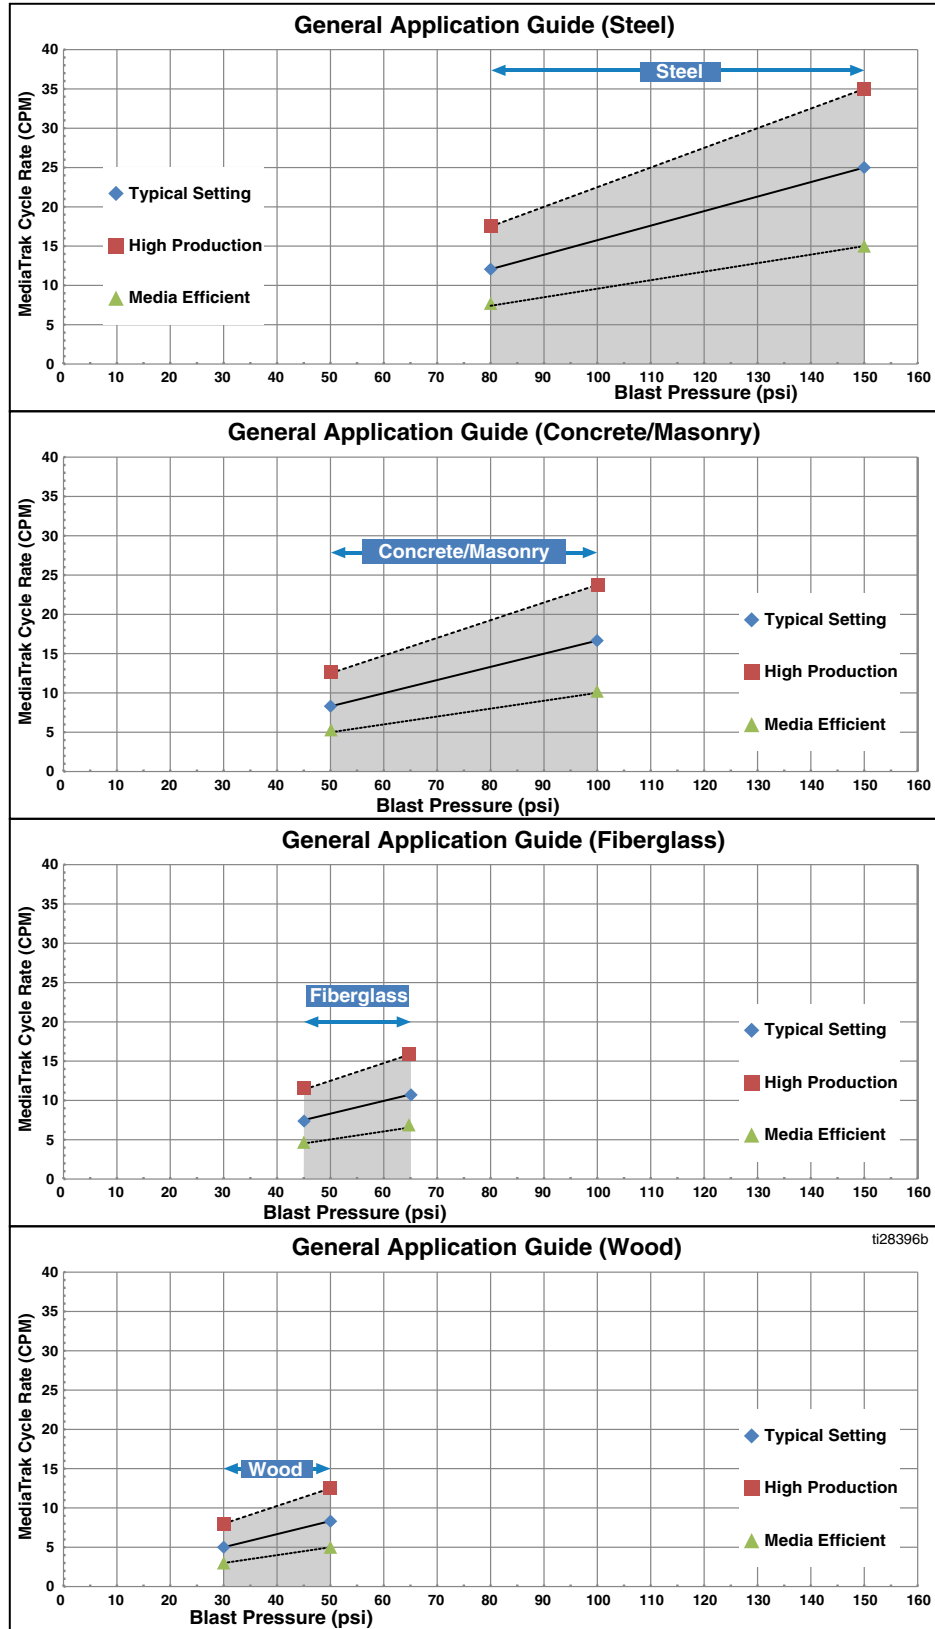

## Nozzle Selection Guide

Use the **Blast Pressure vs. Air Flow Guide** to determine which nozzle to use to achieve the desired blast pressure based on compressor output.

### Blast Pressure vs. Air Flow Guide

Blast Pressure	#6HP CFM (m <sup>3</sup> /min)	#7 CFM (m <sup>3</sup> /min)	#7HP CFM (m <sup>3</sup> /min)	#8 CFM (m <sup>3</sup> /min)	#8HP CFM (m <sup>3</sup> /min)	#10 CFM (m <sup>3</sup> /min)	#10HP CFM (m <sup>3</sup> /min)
30 psi (2.0 bar, 0.20 MPa)	78 (2.2)	117 (3.3)	137 (3.9)	151 (4.3)	161 (4.6)	229 (6.5)	224 (6.9)
40 psi (2.8 bar, 0.28 MPa)	90 (2.5)	129 (3.7)	161 (4.6)	181 (5.1)	212 (6.0)	254 (7.2)	286 (8.1)
50 psi (3.5 bar, 0.35 MPa)	117 (3.3)	161 (4.6)	193 (5.5)	200 (5.7)	225 (6.4)	308 (8.7)	337 (9.5)
60 psi (4.1 bar, 0.41 MPa)	137 (3.9)	190 (5.4)	225 (6.4)	234 (6.6)	256 (7.2)	362 (10.3)	391 (11.1)
70 psi (4.8 bar, 0.48 MPa)	166 (4.7)	225 (6.4)	251 (7.1)	269 (7.6)	293 (8.3)	422 (11.9)	447 (12.7)
80 psi (5.5 bar, 0.55 MPa)	188 (5.3)	244 (6.9)	281 (8.0)	298 (8.3)	337 (9.5)	460 (13.0)	498 (14.1)
90 psi (6.2 bar, 0.62 MPa)	210 (5.9)	266 (7.5)	293 (8.3)	317 (9.0)	374 (10.6)	520 (14.7)	562 (16.0)
100 psi (6.9 bar, 0.69 MPa)	239 (6.8)	283 (8.0)	327 (9.3)	378 (10.7)	413 (11.7)	561 (15.9)	601 (17.0)
110 psi (7.6 bar, 0.76 MPa)	256 (7.2)	325 (9.2)	347 (9.8)	420 (11.9)	457 (12.9)	634 (18.0)	664 (18.8)
120 psi (8.3 bar, 0.83 MPa)	273 (7.7)	344 (9.7)	378 (10.7)	452 (12.8)	476 (13.5)	691 (19.6)	720 (20.4)
130 psi (9.0 bar, 0.90 MPa)	288 (8.2)	374 (10.6)	415 (11.8)	493 (14.0)	527 (16.2)	721 (20.4)	759 (21.5)
140 psi (9.7 bar, 0.97 MPa)	313 (8.9)	405 (11.5)	449 (12.7)	530 (15.0)	571 (16.2)	758 (21.5)	797 (22.6)
150 psi (10.3 bar, 1.0 MPa)	331 (9.5)	430 (12.2)	476 (13.5)	558 (15.8)	601 (17.0)	796 (22.54)	853 (24.2)

Legend:

< 185 CFM

185 - 375 CFM

> 375 CFM

## Use the Wash Feature



The wash feature uses water (without abrasive) to rinse areas that have been blasted with abrasive. It is also a convenient feature for flushing abrasive from the blast hose.


### NOTICE

There will always be some residual abrasive in the blast hose. Never use the wash feature on any surface other than where you have blasted, or intend to blast. The wash feature could cause damage to the surface.

### NOTICE

Do not use the wash feature on wood that has been blasted. It could damage the wood and cause the grain to rise. Wait for the wood to dry and then use a broom, brush, or vacuum to remove any residual abrasive.

1. Close the abrasive ball valve (J).

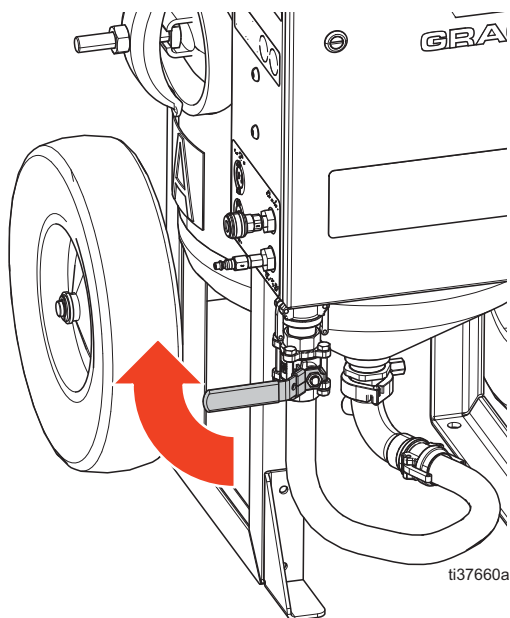


ti37660a

2. Turn the selector valve (T) to WASH.



ti27758a

3. Blast 1-2 minutes until the abrasive is cleared from the hose.

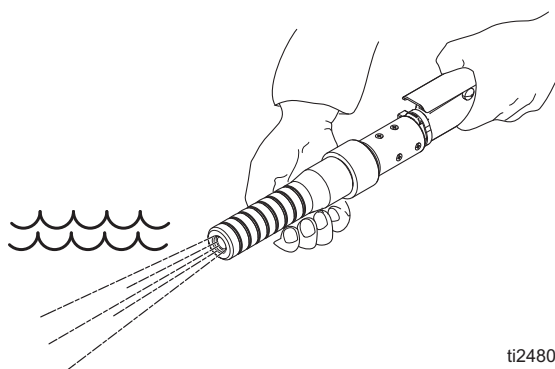


ti24804a

4. The equipment is now ready to wash any previously blasted surfaces.

## Refill the Pot with Abrasive




1. Verify that the pot pressure gauge (H) reads 0 psi. If the pressure gauge does not read 0 psi, perform the **Pressure Relief Procedure**, page 15.
2. Open the pot dump valve (F) to drain water from the pot.

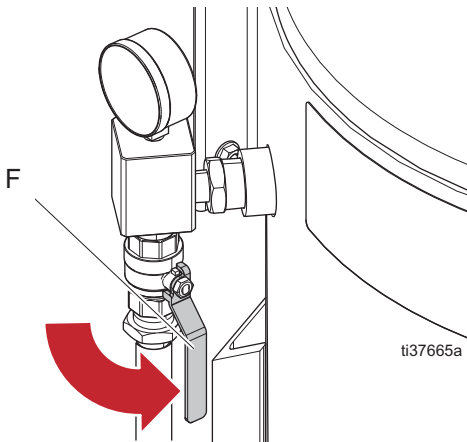

**NOTE:** Be prepared to capture the water that will be drained from the pot. All disposals must comply with national, state, and local regulations.


3. Engage the pop-up pin by compressing the spring and turning the handle 90° to hold the pop-up in the open position.

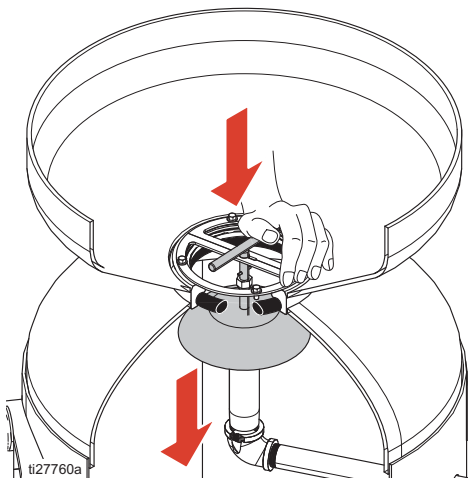

4. Add the abrasive. Refer to **Technical Specifications**, page 50, for capacity information.
5. Continue to step 8 from **Fill Pot with Abrasive Media**, page 13.

## Standby

1. Close the abrasive ball valve (J).

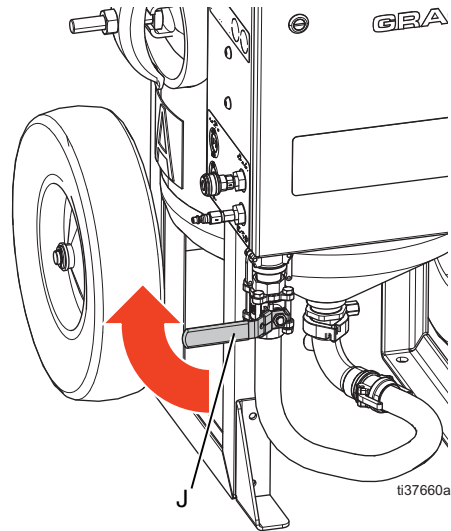

### NOTICE

To prevent material from packing out and damaging the blast hoses, do not shut off your air compressor during Standby.

2. Turn the selector valve (T) to OFF.




ti27756a

3. Open the pot dump valve (F) until the pot pressure gauge reaches 0 psi.

### POT PRESSURE



0 psi

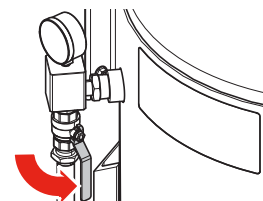

ti37666a

## Shutdown



### NOTICE

To prevent material from packing out and damaging blast hoses, ensure that the abrasive ball valves are fully closed before shutting off your air compressor.

1. When you have finished blasting, use the wash feature to flush all of the abrasive from the blast hose. See **Use the Wash Feature**, page 21.

2. Turn the selector valve to OFF, and with the abrasive ball valve closed, continue to blast until water is cleared from the hose. This is to dry the inside of the hose for storage.



1027756a


3. Perform **Pressure Relief Procedure**, page 15.

## Drain the Pot




**NOTE:** Before draining the pot, verify that all steps in **Pressurize the Pot**, page 14, have been followed. Check the pot pressure gauge (H) to make sure the pot is pressurized.

1. Close the abrasive ball valve (J).

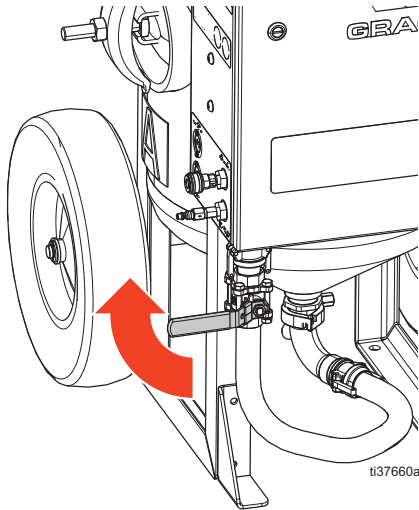

2. Disconnect the abrasive ball valve cam-lock by removing the coupler pins and pulling the rings out and up to pull the two cams away from the groove.

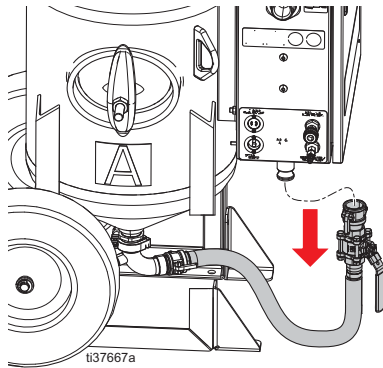


3. Hold a bucket under the cam-lock coupler, then turn the selector valve (T) to WASH. This will clean debris from the cam-lock coupler and gasket.

**NOTE:** Make sure the gasket is clean and in place after the procedure.

4. Turn the selector valve (T) to BLAST. This will pump the abrasive out through the abrasive hose.


5. Place a bucket under the abrasive hose. Slowly open and close the abrasive ball valve to flush abrasive material from the pot. Repeat several times. Once no abrasive material flows from the hose, close the abrasive ball valve. Turn the selector valve (T) to OFF.

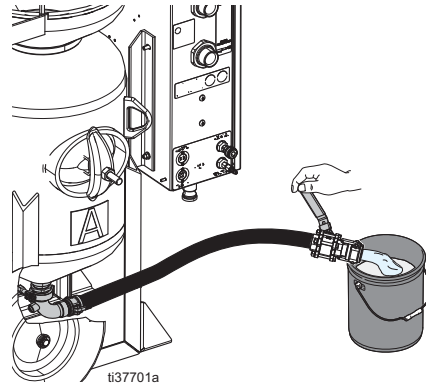


### NOTICE

If the pot is pressurized, relieve pressure by opening the dump valve before proceeding to step 6.

6. Engage the pop-up pin to hold the pop-up open and allow air to enter.

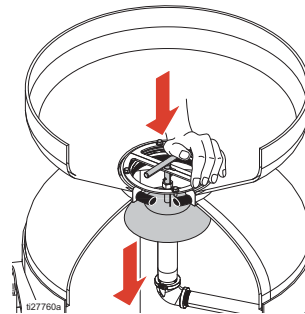

7. Open the abrasive ball valve and drain the pot of water.
8. Close the pop-up and connect the abrasive hose.

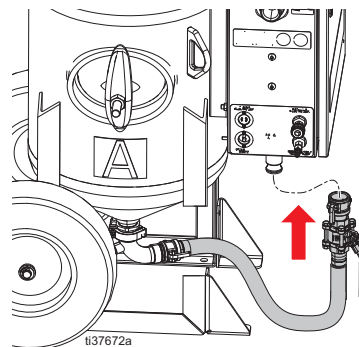

**NOTE:** The system must be winterized if it will be exposed to temperatures below freezing. See **Winterize the Equipment**, page 25.


## Winterize the Equipment



### NOTICE

Vapor abrasive blasters must be winterized whenever there is a possibility of freezing temperatures during storage to avoid damage to the equipment.

1. Drain the pot. See **Drain the Pot**, page 24.
2. Disconnect the water inlet regulator from the pump and install the winterizing tube. Insert the winterizing tube into a windshield washer fluid container. Choose a windshield wash with a rating that will protect the equipment for the lowest temperatures in your area.

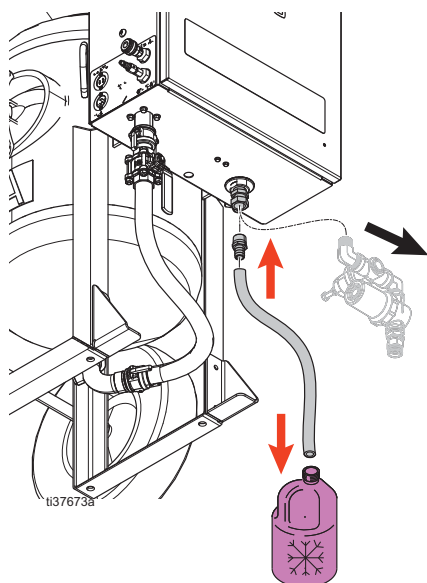

3. Turn the selector valve (T) to WASH and open the rinse ball valve. While holding the rinse hose over the pot, run the pump until windshield wash comes out of the rinse hose.



ti27758a

4. Move the selector valve (T) into the other two positions (BLAST and OFF). Confirm that the internal water tubing fills with windshield wash before turning the selector valve to the next position.

**NOTE:** All water tubing should be filled with windshield wash for full protection.

5. Engage the emergency stop (L).
6. Make sure that the rinse ball valve (U) is left open.

### NOTICE


When ice forms behind the seals, the seals can become damaged. During storage, position all ball valves in the open position.

## Use the Water Dose Meter



The water dose meter feature allows the user to Adjust how wet the blast will be during operation.

1. Perform the **Adjust Abrasive Media** procedure, page 17.
2. Adjust the water dose valve (N) to adjust how wet the blast will be during operation.

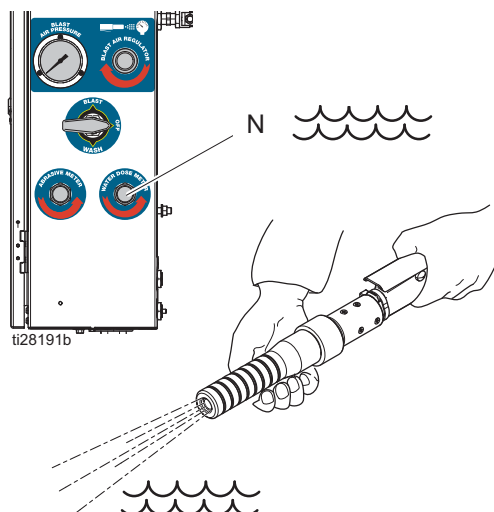

ti28191b

# Troubleshooting



Problem	Cause	Solution
Unable to fill or pressurize the pot with water.	The emergency stop (L) is engaged.	Disengage the emergency stop (L).
	The air supply is inadequate.	Make sure the air compressor is capable of supplying the minimum air flow requirements for your system. See <b>Technical Specifications</b> , page 50. Make sure the air inlet pressure gauge reads 100-175 psi (6.8-12 bar, 0.68-1.2 MPa). If the gauge does not read 100-175 psi, check the air compressor for proper setup. Make sure the air inlet filters are clean, and replace if necessary.
	Inadequate water supply to the pump.	<b>Systems with water tanks:</b> Make sure the water tank is full and the inlet ball valve is open. Clean or replace water inlet filter if necessary. Make sure all fittings connections are tight.
		<b>Systems with pressurized supply connections:</b> Ensure water supply connection is connected and pressurized. Check that water supply meets appropriate pressure and flow requirements. Ensure all fitting connections are tight. Check inlet water pressure regulator for proper flow direction installation. See <b>EQm Parts</b> , page 35. Check inlet water pressure regulator screen filter for debris, clean if possible. Replace regulator if no flow can be passed through regulator.
	The water pump air regulator is malfunctioning.	Disengage the blast control switch (A). Adjust the pump inlet air pressure regulator until the pump air pressure regulator gauge reads 100 psi (6.9 bar, 0.69 MPa). If you are unable to attain this setting, check the air inlet filters and make sure the supply air pressure is greater than or equal to 100 psi. If the above steps do not resolve issue, replace the pump air pressure regulator.
	The water pump is malfunctioning.	Rotate 3-way selector valve to OFF position. Open rinse valve and ensure pump cycles, and water flows from rinse hose. Close rinse valve and verify that pump stalls. If pump continues to creep or will not prime, refer to manual 333397 for pump service.
	The pop-up cannot seal.	Make sure the pop-up is clean and free of debris in the o-ring sealing area. Check for proper pop-up alignment in the closed position (there should be no gaps between the o-ring and the pop-up). Remove the o-ring and make sure the o-ring gland is clear of debris. Replace the o-ring and /or pop-up if worn.
	The water pressure regulator is malfunctioning.	Adjust the water pressure regulator until the pot pressure gauge reads 185 psi (12.75 bar, 1.275 MPa). If this adjustment is not possible, service the water pressure regulator. Refer to your regulator manual. See <b>Related Manuals</b> , page 3.

Problem	Cause	Solution
<p>The blast hose recoils heavily when the blast control switch (A) is engaged. Large slugs of abrasive and water are ejected from nozzle.</p>	<p>The abrasive ball valve was left open during shut down.</p>	<p>See <b>Shutdown</b>, page 23, step 2.</p>
	<p>The abrasive ball valve is worn.</p>	<p>With the pot pressurized and the abrasive ball valve closed, engage the blast control switch (A) and check to make sure the pump is stalled. If the pump rod is creeping, replace abrasive ball valve (J) or replace the abrasive ball valve seals. See <b>Common Spare Parts</b>, page 46.</p>
	<p>The pinch hose is worn.</p>	<p>With the pot pressurized and the abrasive ball valve open, check to make sure the pump is stalled. If the pump rod is creeping, replace the pinch hose. See <b>Replace the Pinch Hose</b>, page 34.</p>
<p>The pot pressure relief valve is discharging water.</p>	<p>The water pressure regulator is malfunctioning.</p>	<p>Adjust the water pressure regulator to 185 psi (12.75 bar, 1.275 MPa). If this adjustment is not possible, service the water pressure regulator. Refer to your regulator manual. See <b>Related Manuals</b>, page 3.</p>
	<p>The pressure relief valve has failed.</p>	<p>Replace the pressure relief valve if weeping occurs at or below 185 psi (12.75 bar, 1.275 MPa).</p>
<p>No blast air flow when the blast control switch (A) is engaged. The water pump does cycle while the blast control switch is engaged.</p>	<p>The adjustable blast regulator is not adjusted to the correct pressure.</p>	<p>Adjust the blast regulator to the desired pressure while the blast control is engaged.</p>
	<p>The tubing to the main air regulator is not properly connected or there are air leaks in the fittings or tubing.</p>	<p>See the <b>Tubing Schematic</b>, page 48. Check for leaks at connection points.</p>
	<p>The adjustable blast air regulator is malfunctioning.</p>	<p>Clean or replace the adjustable blast air regulator.</p>
	<p>The main air regulator is malfunctioning.</p>	<p>Disassemble the main air regulator and inspect components. Replace or repair parts as necessary. See <b>Enclosure Box Parts</b>, page 37.</p>

Problem	Cause	Solution
<p>No blast air flow when the blast control switch (A) is engaged. The water pump does not cycle while the blast control switch is engaged.</p>	<p>The emergency stop (L) is engaged.</p>	<p>Disengage the emergency stop (L).</p>
	<p>The air supply is inadequate.</p>	<p>Make sure the air compressor is capable of supplying the minimum air flow requirements for your system. See <b>Technical Specifications</b>, page 50, for more information. Make sure the air inlet pressure gauge reads 100-175 psi (6.8-12 bar, 0.68-1.2 MPa). If the gauge does not read 100-175 psi, check the air compressor for proper setup.</p>
	<p>The electric blast control circuit is malfunctioning.</p>	<p>Ensure proper 12V DC supply is connected, and at full charge. Inspect cable for damaged or 'open' wiring. Check blast control fuse and replace if necessary. Check for continuity through connectors on the control box and all external cables. Check continuity through the electric blast control switch (A) (the switch is normally open). If all above items are functional, replace the 4-way solenoid valve.</p>
	<p>The pneumatic blast control circuit is malfunctioning.</p>	<p>Actuate the blast control switch (A) and check for proper spool valve actuation in the 4-way valve. If no actuation occurs, check the blast control switch and twin-line by disconnecting the yellow tube at the enclosure male quick disconnect and engage the control switch. If no air comes from the fitting, check the pneumatic blast control filter. If the filter is clean, check for signal air at the blast control switch. Replace the pneumatic blast control switch if signal air does not pass through the valve when the handle is depressed. If the switch is functioning, make sure the yellow tubing inside the control box is properly connected and is clear of obstructions. If the tubing is clean, replace the 4-way solenoid valve.</p>



Problem	Cause	Solution
<p>While in BLAST mode, with the blast control switch (A) engaged, air is flowing from the nozzle but little or no abrasive is flowing from the nozzle.</p>	<p>The abrasive ball valve is closed.</p>	<p>See <b>Setup</b>, page 13.</p>
	<p>The abrasive metering valve is not properly set.</p>	<p>See <b>Setup</b>, page 13.</p>
	<p>The pot does not have a sufficient amount of abrasive.</p>	<p>See <b>Refill the Pot with Abrasive</b>, page 22.</p>
	<p>The pinch valve does not open.</p>	<p>Engage the blast control switch (A) and check for actuation of the pinch valve. If there is no actuation, disconnect the orange tubing at the pinch valve. If the pinch valve opens and source air is coming from the orange tubing, confirm that the tubing is correctly routed. If the pinch valve does not open, replace it. If the pinch valve opens and there is no source air coming from the tubing, inspect the mufflers on the 4-way valve for debris. If debris is not present, clean or replace the 4-way valve.</p>
	<p>There is an obstruction inside the pot or inside the abrasive hose between the pot and the enclosure.</p>	<p>Follow <b>Drain the Pot</b>, page 24, followed by the <b>Pressure Relief Procedure</b>, page 15. With the abrasive hose disconnected, inspect the interior of the pinch hose for obstructions or debris and replace if necessary (see <b>Replace the Pinch Hose</b>, page 34). Remove the tri-clamp from the bottom of the pot. Inspect the bottom of the pot and the abrasive hose for obstructions or debris.</p>
	<p>The pot pressure is too low.</p>	<p>With the blast control disengaged, allow the pot to pressurize and wait for the pump to stall. If the pot pressure gauge does not reach 185 psi (12.75 bar, 1.275 MPa), see the “Unable to fill or pressurize the pot with water” problem listed on this table.</p>
<p>The blast pressure is too high.</p>	<p>If the blast pressure gauge reads 160 psi (11.03 bar, 1.10 MPa) or greater, it may not be possible to achieve than 15 CPM on the MediaTrak. This is more common with fine mesh abrasive usage. Decrease the blast pressure to 100 psi (6.9 bar, 0.69 MPa) to see if CPM can be increased.</p>	

Problem	Cause	Solution
<p>The blast control switch (A) is not engaged, but blasting occurs.</p>	<p>The air supply is inadequate.</p>	<p>Make sure the air compressor is capable of supplying the minimum air flow requirements for your system. See <b>Technical Specifications</b>, page 50. Make sure the air inlet pressure gauge reads 100-175 psi (6,8-12 bar, 0.68-1.2 MPa). If the gauge does not read 100-175 psi, check the air compressor for proper setup.</p>
	<p>The main air regulator is malfunctioning or is stuck open.</p>	<p>Disassemble the main air regulator and check for obstructions. Replace or repair parts as necessary. See <b>Enclosure Box Parts</b>, page 37.</p>
	<p>The electric blast control circuit is malfunctioning.</p>	<p>Unplug the hose cable at the control box. If the blast stops, inspect the hose cable for shortened wiring. Check continuity through the electric blast control switch (A) (the switch is normally open). Check for continuity across connectors of the recessed plugs on the control box (there should be no continuity). If all above items are functional, replace the 4-way solenoid valve.</p>
	<p>The pneumatic blast control circuit is malfunctioning.</p>	<p>Engage the emergency stop (L). If blasting stops, check the blast control switch (A) by disconnecting the yellow tube at the enclosure male quick disconnect. There should be no signal air unless you engage the control switch. If the switch is functioning, remove the exhaust mufflers from the 4-way and check for debris, clean ports, and replace the mufflers if necessary. If all above items are functional, replace the 4-way solenoid valve.</p>
<p>While the blast control switch (A) is engaged, the blast air flow is fluctuating.</p>	<p>The supply air pressure is fluctuating.</p>	<p>Make sure the compressor meets minimum flow requirements and is operating properly. See <b>Technical Specifications</b>, page 50, for more information on flow requirements.</p>
	<p>The main air regulator is malfunctioning or is stuck open.</p>	<p>Disassemble the main air regulator and check for obstructions. Replace or repair parts as necessary. See <b>Enclosure Box Parts</b>, page 37.</p>
	<p>The electric blast control circuit is malfunctioning.</p>	<p>Inspect the hose cable for damaged or shorted partially open wiring. Check the blast control fuse and replace if necessary. Check for loose wire connections on the recessed plugs on the control box (K) and all external cables. Check continuity through the electric blast control switch (A) (the switch is normally open). If all above items are functional, replace the 4-way solenoid valve.</p>
	<p>The pneumatic blast control circuit is malfunctioning.</p>	<p>Actuate the blast control switch (A) and check for proper spool valve actuation in the 4-way valve. If no actuation occurs, check the blast control switch by disconnecting the yellow tube at the enclosure male quick disconnect and engage the control switch. If only a little air comes from the fitting, check the twin-line hose for damage or crimping and check the pneumatic blast control filter. If the twin-line and filter are clean, replace the pneumatic blast control switch. If the switch is functioning, make sure the yellow tubing inside the control box is properly connected and clear any obstructions. If all above items are functional, replace the 4-way solenoid valve.</p>

Problem	Cause	Solution
The blast spray pattern is sputtering or irregular.	The air supply is inadequate.	Make sure the air compressor is capable of supplying the minimum air flow requirement for your system. See <b>Technical Specifications</b> , page 50. Make sure the air inlet pressure gauge reads 100-175 psi (6.8-12 bar, 0.68-1.2 MPa). If the gauge does not read 100-175 psi check the air compressor for proper setup. Make sure the air inlet filters are clean and replace if necessary.
	The blast hose was not properly cleaned out after previous use.	See <b>Shutdown</b> , page 23.
	The abrasive metering valve setting is too high for the blast pressure and/or abrasive type.	See <b>Set the Abrasive Metering Value</b> , page 18.
	The pot does not have a sufficient amount of abrasive.	Refill the pot with abrasive. See <b>Refill the Pot with Abrasive</b> , page 22.
	There is an obstruction in the nozzle.	Remove the nozzle and inspect for blockage, buildup, or damage. Replace the nozzle if necessary.
	There is an obstruction inside the pot or inside the abrasive hose between the pot and the enclosure.	Perform <b>Drain the Pot</b> , page 24, followed by <b>Operation</b> , page 15. With the abrasive hose disconnected, inspect the interior of the pinch hose for obstructions or debris and replace if necessary. See <b>Replace the Pinch Hose</b> , page 34. Remove the tri-clamp from the bottom of pot. Inspect the bottom of the pot and abrasive hose for obstructions or debris.
Too much dust occurs during blasting.	There is not enough water in abrasive mixture.	See <b>Use the Water Dose Meter</b> , page 25. A water dose upgrade kit is available for EQm systems.
	The blast pressure is too high.	Decrease the blast pressure and re-evaluate the dust levels.
	The abrasive is too fine for the application.	Try a coarser or harder abrasive if possible.
Too much water is coming from the nozzle in BLAST mode.	The water dose valve (N) is open too far.	Close the water dose valve (N).
	The abrasive material is too coarse.	If possible, use at least 20 mesh abrasive material. Otherwise, decrease the CPM setpoint until the pattern improves.
	The abrasive metering valve setting is too high for blast pressure and/or abrasive type.	See <b>Set the Abrasive Metering Value</b> , page 18.


# Repair

## Replace the DataTrak Battery

				
<p>To reduce the risk of fire and explosion, the battery must be replaced in a non-hazardous location.</p> <p>Use only an approved replacement battery (see table). Use of an unapproved battery will void Graco's warranty.</p>				


### Replace Battery

1. Unscrew cable from the back of the reed switch assembly.
2. Remove the cable from the two cable clips.

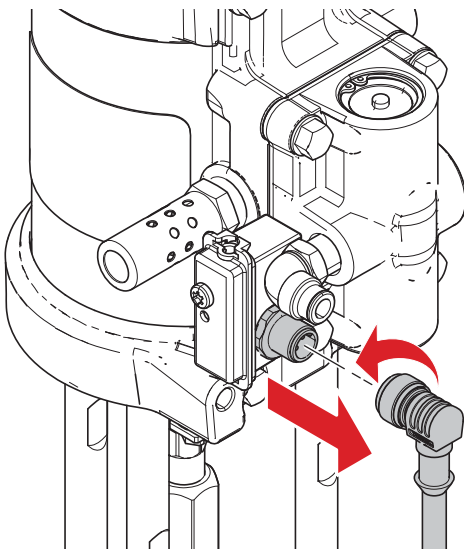

ti24946b

3. Remove the DataTrak module from the bracket. Take the module and attached cable to a non-hazardous location.

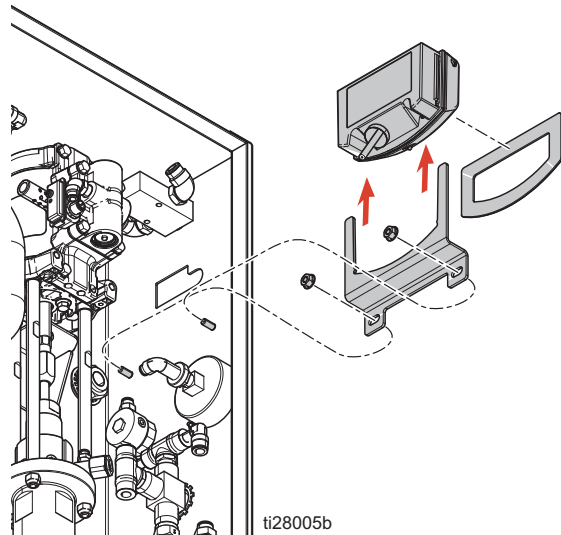



ti28005b

4. Remove the two screws on the back of the module to access the battery.
5. Disconnect the used battery and replace it with an approved battery.


Approved Batteries
Energizer® brand alkaline #522
Varta® brand alkaline #4922
UltraLife® brand lithium #U9VL
Duracell® brand alkaline #MN1604

## Replace the DataTrak Fuse

				
<p>To reduce the risk of fire and explosion, the fuse must be replaced in a non-hazardous location.</p> <p>Use only an approved replacement fuse (see table). Use of an unapproved fuse will void Graco's warranty.</p>				

### Replace Fuse

1. Remove the screw, metal strap, and plastic holder.
2. Pull the fuse away from the board.
3. Replace with an approved fuse.

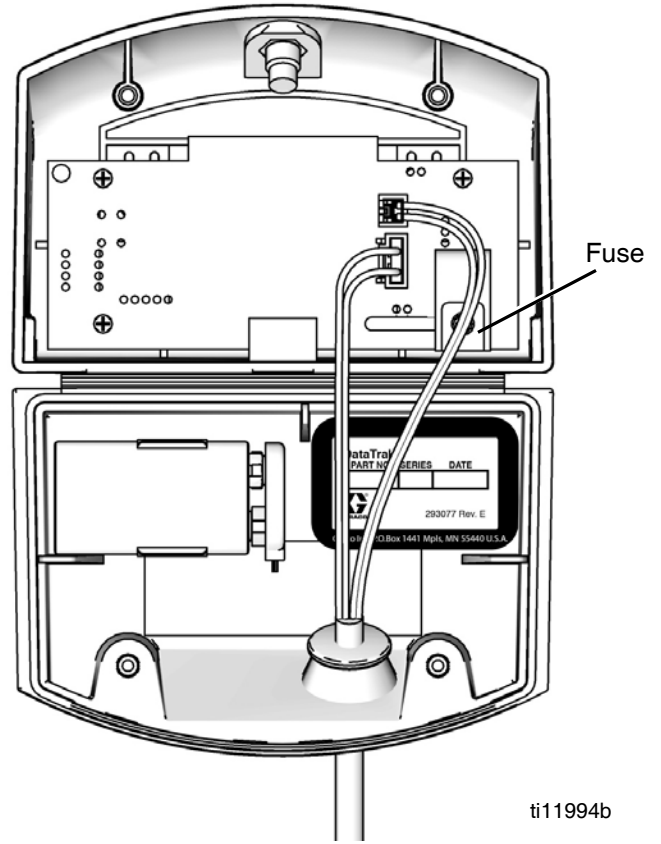

Approved Fuses		
DataTrak Part Number	Series Letter	Fuse Required
17K057	A or B	24C580
	C and later	24V216
All other part numbers	A	24C580
	B and later	24V216

## Replace the Pinch Hose

### Remove the Pinch Hose



1. Perform **Pressure Relief Procedure**, page 15.
2. Remove the claw coupler (CP) at the swivel connection.
3. Use the supplied 2-7/8 in. wrenches (WR) to loosen the lock nuts (S1, S2) on the inside and outside of the box.
4. Remove the clamp (HC) connecting the blast circuit (BC) to the check valve.
5. Remove check valve assembly (CV) and clean all abrasive that may be stuck to the check valve components.


#### NOTICE

Check valve components coated in abrasive can allow abrasive to enter the main air regulator and lead to improper operation. Clean off all abrasive material that may be stuck to the check valve components to allow for proper operation.

6. Remove the bottom hose clamp (C2).
7. Pull the pinch hose (PH) out of the box.  
**NOTE:** Use the blast circuit (BC) as a handle, and twist while pulling.
8. Loosen the remaining hose clamp and remove the pinch hose from the circuit.



### Install the Pinch Hose

1. Reinstall the check valve, ensuring proper orientation. Assemble the valve with the plunger facing the bent manifold.
2. Place both hose clamps (C1, C2) on the pinch hose (PH). Leave 1/4 in. of hose exposed on the ends.
3. Slide the pinch hose (PH) into the box through the pinch valve.
4. Reinstall the blast circuit (BC) and pinch hose (PH) into the box through the pinch valve.
5. Install and tighten the clamp (HC) to 15ft-lb (20.3 N•m) to connect the blast circuit to the check valve.  
**NOTE:** If necessary, loosen the inside nut (S2) to provide room for gasket (G) installation. Inspect the gasket (G) and replace if necessary.
6. Apply anti-seize to threads on clamps (C1, C2). Align the nuts pointing towards the front of the enclosure. Torque to 85 +/- 5 in-lb (9.6 +/- 0.5 N•m).
7. Tighten the lock nuts (S1, S2).
8. Install the claw coupler (CP).

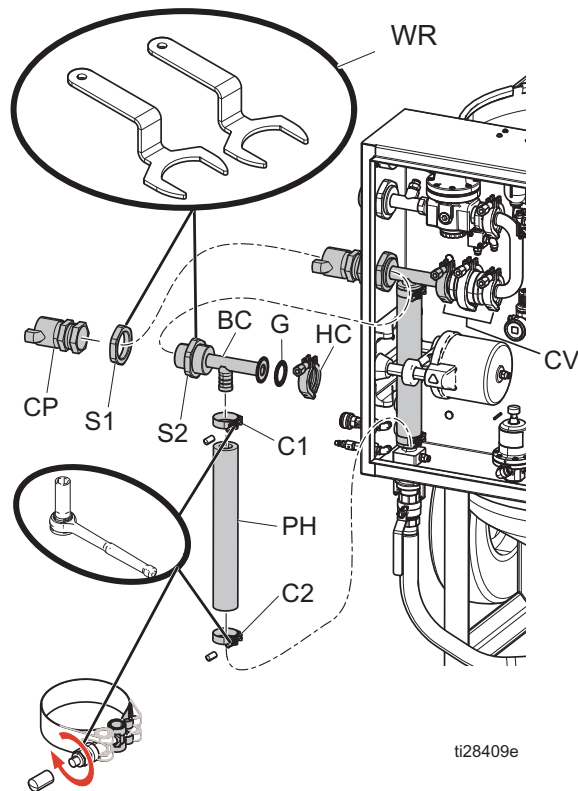

# Parts

## EQm Parts

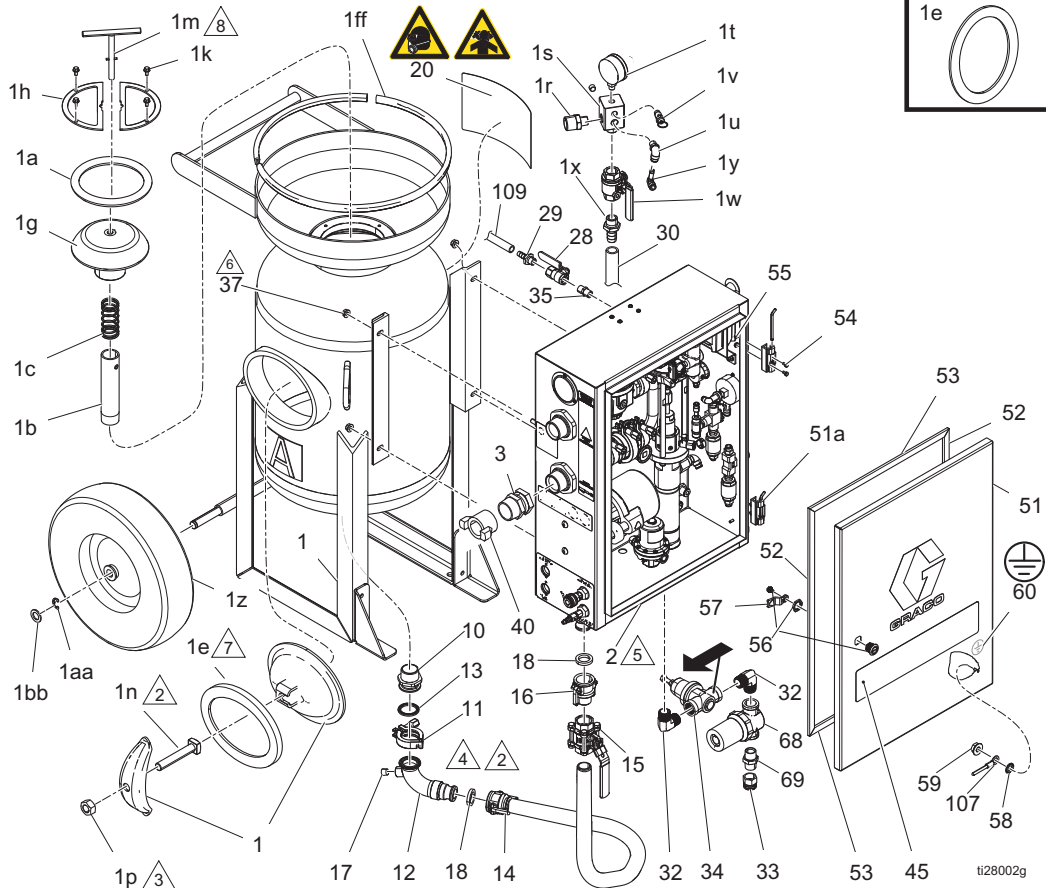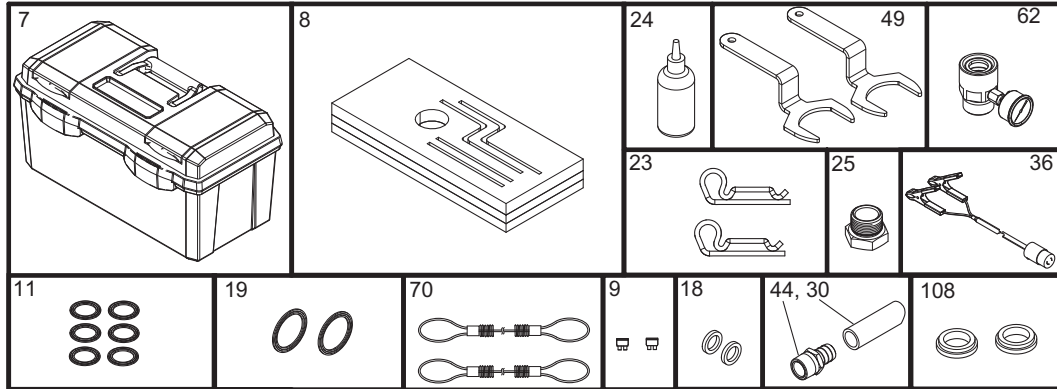


- 1. Apply thread sealant to all non-swivel pipe threads.
- Apply anti-seize to threads.
- Torque to 60 +/- 5 ft-lb (81.3 +/- 6.7 N•m) with pot pressurized.
- Torque to 15 +/- 2 ft-lb (20.3 +/- 2.7 N•m)
- Apply anti-seize to enclosure mounting studs.
- Torque to 25-30 ft-lb (34-40.6 N•m).
- The hand-way gasket must be installed centered and flat on the hand-way cover.
- Apply anaerobic sealant to threads.

## EQm Parts List

Ref.	Part	Description	Qty.	Ref.	Part	Description	Qty.
1*	-----	PRESSURE POT, blast media, 3.5 cu ft	1	24	206994	FLUID, TSL 8 oz. bottle	1
1a*	17L310	SEAL, o-ring	1	25	EQ1829	FITTING, ground boss, spud, 1-1/2 in.	1
1b*	17H382	PIPE, pop-up	1	28	17L642	VALVE, ball, 3/8 npt, sst	1
1c*	17F822	SPRING, pop-up, sst	1	29	EQ1627	FITTING, nipple, barb, hose, 3/8 in.	1
1e*	17D790	GASKET, hand-way, 6 x 8	2	30	EQ1360	HOSE, braided, clear, 3/4 ID	2
1g*	17L311	SEAL, pop-up, EQ2 pot (includes 1m)	1	32	17K344	FITTING, elbow, 3/4 npt, sst	2
1h*	17L635	BRACKET, pop-up, ring (includes 1k)	1	33	EQ7004	FITTING, hose, garden, 3/4 in. mpt x 3/4 in.fgt, swivel	1
1k*	128504	BOLT, flange hd, serrated, 1/4, ss	4	34	18B105	VALVE, pressure reducing, 3/4 npt	1
1m*	17L632	HANDLE, T, pop-up weldment	1	35	167702	NIPPLE, pipe hex	1
1n*	17L630	BOLT, square hd, 3/4 x 4 1/2, sst	1	36❖	26A014	CABLE, battery	1
1p*	17L630	NUT, hex, 3/4-10, sst	1	37	128226	NUT, flange, 3/8-16, sst	4
1r	17R930	FITTING, nipple, reducing, 1 x 1/2, sst	1	40	EQ1934	COUPLER, sandblast, 1-1/2 npt(f), brass	1
1s	-----	MANIFOLD, dump	1	44	17L558	FITTING, 3/4 npt x 3/4 barb, brass	1
1t	17L320	GAUGE, pressure, fluid	1	45	17J941	LABEL, brand, EcoQuip, EQm	1
1u	EQ1500	FITTING, elbow, swivel, male, 3/8 in.	1	49	17L633	TOOL, EQ, wrench, 2-7/8	2
1v	17L622	VALVE, safety relief, 220 psi	1	51	25D033	DOOR, enclosure, small	1
1w	129903	VALVE, ball, 3.4 npt, brass, nickel	1	51a	17T721	KIT, hinge	2
1x	EQ1012	FITTING, nipple, barb, hose, 3/4 in.	1	52◆	-----	GASKET, door, vertical	2
1y	EQ1122	FITTING, elbow, stem, 3/8 in.	1	53◆	-----	GASKET, door, horizontal, small	2
1z*	17L645	WHEEL, semi-pneumatic	2	54	111639	SCREW, cap, hex hd	4
1aa*	17L645	WASHER	2	55	127918	NUT, flange, serrated, m5	4
1bb*	17L645	RING, retaining	2	56	17L623	LOCK, door, tooled (includes 57)	1
1ff*	128982	TRIM, edge, neoprene, black	4.5 ft	57	-----	LATCH, cam, door lock	1
2	-----	ENCLOSURE, EcoQuip, mobile	1	58‡	555629	WASHER, #10 external tooth lock	1
3	113864	UNION, swivel, 1-1/2 npt	1	59‡	127908	NUT, flange, serrated, #10-32, ss	1
7†	-----	BOX, tool, 20 in., black	1	60‡▲	186620	LABEL, symbol, ground	1
8†	-----	INSERT, foam, tool box, EcoQuip	1	62‡	17J958	TOOL, pressure verification	1
9❖	EQ1844	FUSE, blade, atc, 3a	2	68	17L332	STRAINER, in-line	1
10*	17H273	ADAPTER, tri-clamp, 1.5, hex wing nut	1	69	190724	NIPPLE, sst	1
11	17L317	CLAMP, tri-clamp, 1.5, hex-wing nut	1	70	17D786	KIT, replacement, whip check	2
12	17L631	MANIFOLD	7	107‡	194337	WIRE, grounding, door	1
13	680454	GASKET, sanitary fitting	1	108	17C124	GASKET, metal blast coupler	2
14	17L329	HOSE, inlet media (includes 18)	1	109	EQ1840	HOSE, braided, clear, 3/8 in. ID	6 ft
15‡	17L046	VALVE, ball, 1 npt SST	1	▲ Replacement Danger and Warning labels are available at no cost.			
16	17J329	COUPLER, cam-lock, sst, 1 npt(f) (includes 18)	1	* Parts included in Pressure Pot Mobile 3.5 cubic ft Kit (purchase separately).			
17	112306	PLUG, pipe, 3/8 npt, sst	1	❖ Non-ATEX models only.			
18	17L309	GASKET, cam lock, buna, 1.0	2	† Included in Replacement Tool Box Kit, see <b>Other Accessories</b> , page 46.			
19	502598	GASKET, sanitary (PTFE)	2	◆ Included in Small door Gasket Kit 17L694.			
20*▲	17J289	LABEL, instructions	1	‡ Included in Pressure Verification Kit (purchase separately).			
23	17D787	PIN, safety item, hose, hair c (6 pack)	1	‡ Ball valve seal repair kit available, see <b>Common Spare Parts</b> , page 46.			

# Enclosure Box Parts

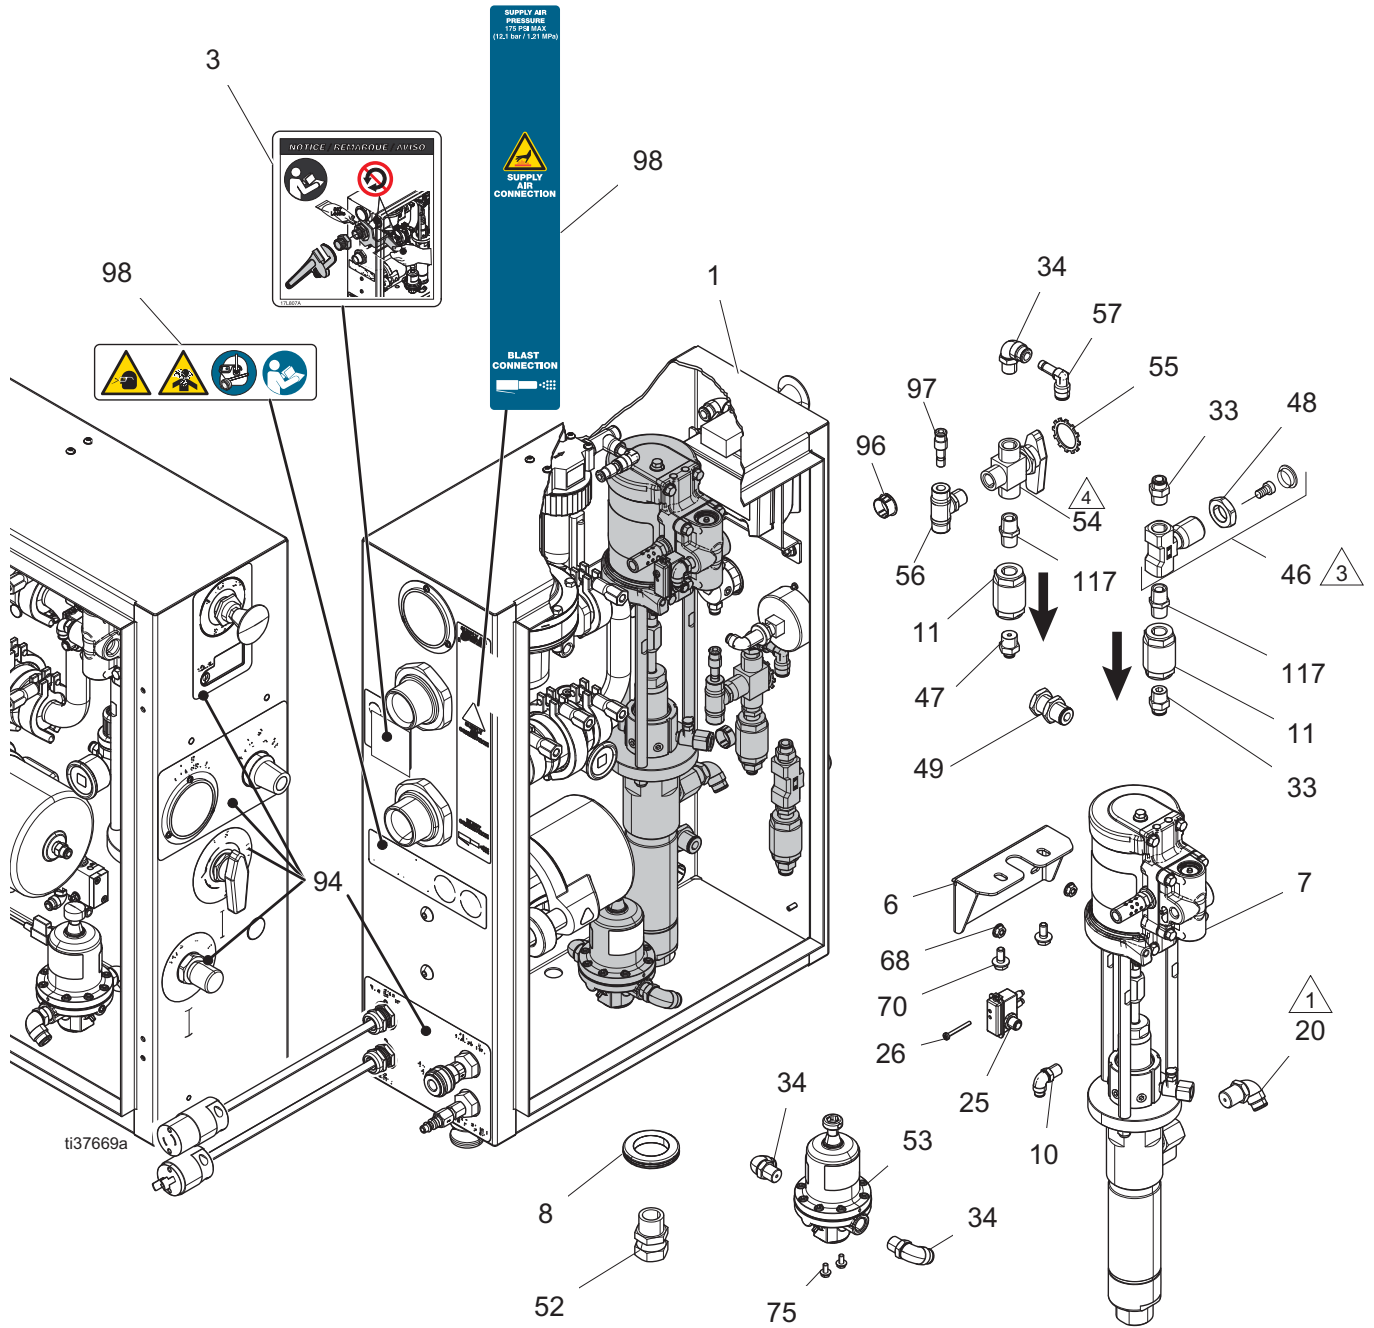


## Enclosure Box Parts List

Ref.	Part	Description	Qty.	Ref.	Part	Description	Qty.
1	25D023	PANEL, enclosure, EQm	1	49	EQ1115	BULKHEAD, connector, union, 3/8 in.	1
3▲	17L807	LABEL, notice	1				
6	-----	BRACKET, pump	1	52	112268	SWIVEL, union	1
7	25A531	PUMP, water, sst, 3:1	1	53	17L324	REGULATOR, pressure, water, 185 psi (includes 75)	1
8	128483	GROMMET, pump, EQ2	1	54	17K055	VALVE, selector, 3-way, 3/8 npt, brass	1
10	121022	FITTING, elbow, male, 1/2 npt	1				
11	EQ1034	VALVE, check, 3/8 in., sst	2	55	118160	WASHER, lock, external	1
20	EQ1798	FITTING, ptc, elbow, 1/2 mpt, 3/8 OD	1	56	EQ1832	FITTING, T, branch, swivel male	1
25	24B659	SWITCH, reed assembly (includes 26)	1	57	EQ1122	FITTING, elbow, stem, 3/8 in.	3
26	-----	FASTENERS, screw, slot hex, #8-32 tap	1	68	127917	NUT, flange, serrated, 1/4-20, ss	4
33	128638	FITTING, ptc, straight, 3/8	5	70	111799	SCREW, cap, hex hd	2
34	EQ1500	FITTING, elbow, swivel, male, 3/8 in.	6	75	128670	BOLT, flange hd, serrated, m5, sst	2
46	17K056	VALVE, needle, 3/8 npt, brass (includes 48)	1	94▲	17J290	LABEL, instructions	1
47	128798	FITTING, ptc, 1/4 tube, 3/8 mpt	1	97	EQ1759	FITTING, stem, reducer	2
48	17H280	NUT, m20, needle valve	1	98▲	17J291	LABEL, safety	1
				117	167702	NIPPLE, pipe	2

▲ Replacement Danger and Warning labels are available at no cost.

# Enclosure Box Parts (continued)

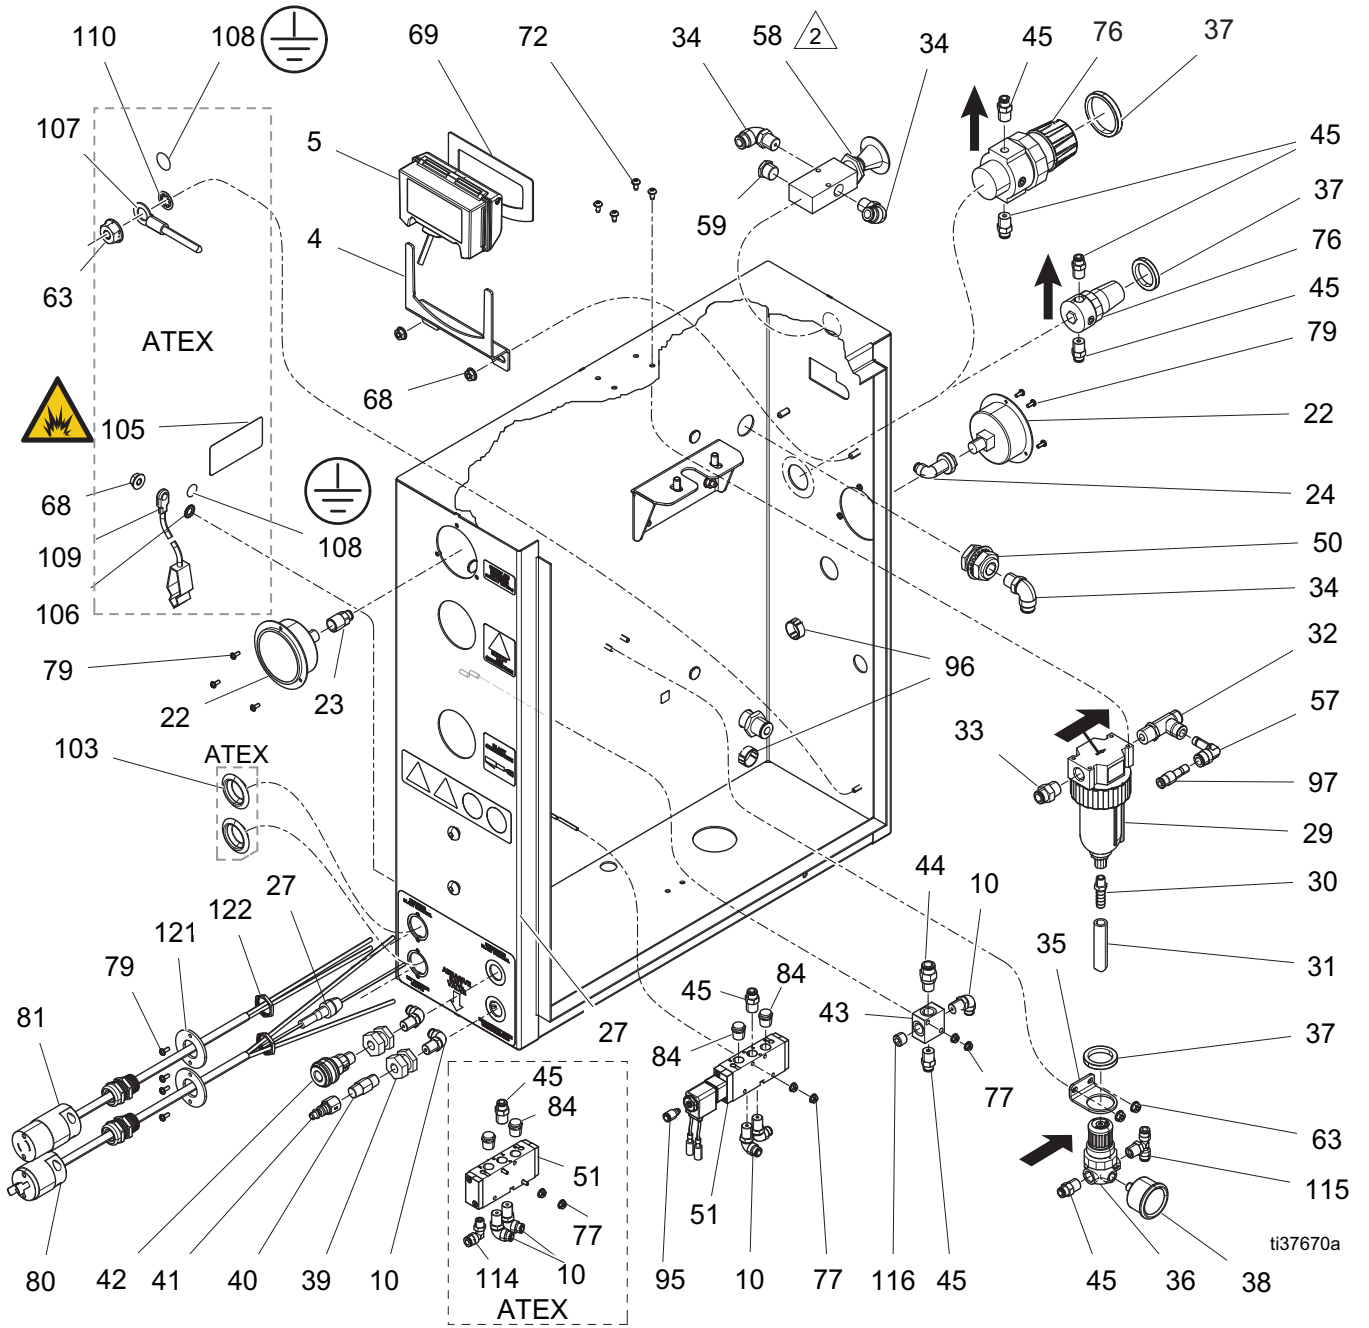

⚠ Apply thread sealant to emergency stop valve stem when reassembling the red knob.

## Enclosure Box Parts List (continued)

Ref.	Part	Description	Qty.	Ref.	Part	Description	Qty.
4	-----	BRACKET, EcoQuip, DataTrak	1	68	127917	NUT, flange, serrated, 1/4-20, ss	2
5	17K057	ENCLOSURE, DataTrak, EcoQuip	1	69	17C001	GASKET, EcoQuip, DataTrak	1
10	121022	FITTING, elbow, male 1/4 npt	5	72	128502	SCREW, pan, type F, #10-24, 3/8, sst	4
22	17L319	GAUGE, flange mount, 2.5 in., 200 psi	2	76	110318	REGULATOR, air, 1.25 in. (31.75 mm) OD only	1
23	128725	FITTING, ptc, 1/4 tube, 1/4 npt	1	†	-----	REGULATOR, air, 1.75 in. (44.5 mm) OD only	1
24	EQ1113	FITTING, elbow, swivel, female	1	77	128672	NUT, serrated flange, #6-32, sst	4
27	-----	CABLE, fuse holder	1	79‡	127929	SCREW, sems, #6-32, 3/8 in., sst	10
28	EQ1844	FUSE, blade, atc, 3a	1	80‡	19Y239	CABLE, male plug	1
29*	106148	FILTER, air, 3/8 npt	1	81‡	25P357	CABLE, female plug	1
30	128273	FITTING, barb x npt, brass	1	84	121021	MUFFLER, 1/4 npt	2
31	EQ1840	HOSE, braided, clear, 3/8 ID	2	95	128888	FITTING, ptc, 1/4 tube, m5	1
32	128634	FITTING, ptc, tee, run, 3/8 in.	1	96	128500	PLUG, hole, snap-in, black, 22 mm	2
33	128638	FITTING, ptc, straight, 3/8 in.	4	97	EQ1759	FITTING, stem, reducer	2
34	EQ1500	FITTING, elbow, swivel, male, 3/8 in.	5	103	128892	PLUG, hole, black	2
35	17G567	BRACKET, regulator, EQ2	1	105▲	16P265	LABEL, safety, warning, explosion	1
36	17L322	REGULATOR, air, adj, 100 psi	1	106	100985	WASHER, lock ext	1
37	15K040	NUT, 1.25 in. OD regulator	2	107	194337	WIRE, grounding, door	1
†	-----	NUT, 1.75 in. OD regulator	1	108▲	186620	LABEL, symbol, ground	2
38	17L323	GAUGE, pressure, 1-1/2 in., 160 psi.	1	109	237686	WIRE, ground assembly with clamp	1
39	123390	FITTING, 1/4 npt, brass	2	110	555629	WASHER, #10 external tooth lock	1
40	EQ1814	FILTER, in-line, 1/4 npt(m)	1	114	128863	FITTING, ptc, elbow, 1/4 OD, 1/8 npt	1
41	EQ1421	COUPLER, air, 1/4 qd(m), 1/4 npt(f), brass	1	115	128864	FITTING, ptc, tee, branch, 1/4 OD, 1/8 npt	1
42	EQ1813	COUPLER, air, 1/4 qd(f), 1/4 npt(m), brass	1	116	101970	PLUG, pipe, handles	1
43	128479	MANIFOLD, 4-port, 1/4 npt	1	121‡	-----	PLATE, adapter, wire	2
44	128636	FITTING, ptc, 3/8 tube, 1/4 npt	1	122‡	-----	NUT, strain relief	2
45	128637	FITTING, ptc, straight, 1/4	7				
50	16N177	FITTING, bulkhead, brass, 3/8	1				
51	17K053	VALVE, solenoid, elec/pneu, assembly	1				
	17K054	VALVE, solenoid, pneumatic, ATEX	1				
57	EQ1122	FITTING, elbow, stem, 3/8 in.	3				
58	EQ5108	VALVE, 3-way, e-stop, 3/8 in., (f)pt 3-port	1				
59	EQ1438	VENT, breather, 3/8 npt	1				
63	127908	NUT, flange, serrated, #10-32, ss	2				


▲ Replacement Danger and Warning labels are available at no cost.


\* See **Common Spare Parts**, page 46, for replacement filter element.


† Part included in Air Regulator Kit 25P174 (purchase separately).


‡ Part included in Cable Plug Upgrade Kit 19Y238.

# Enclosure Parts (EQm only)

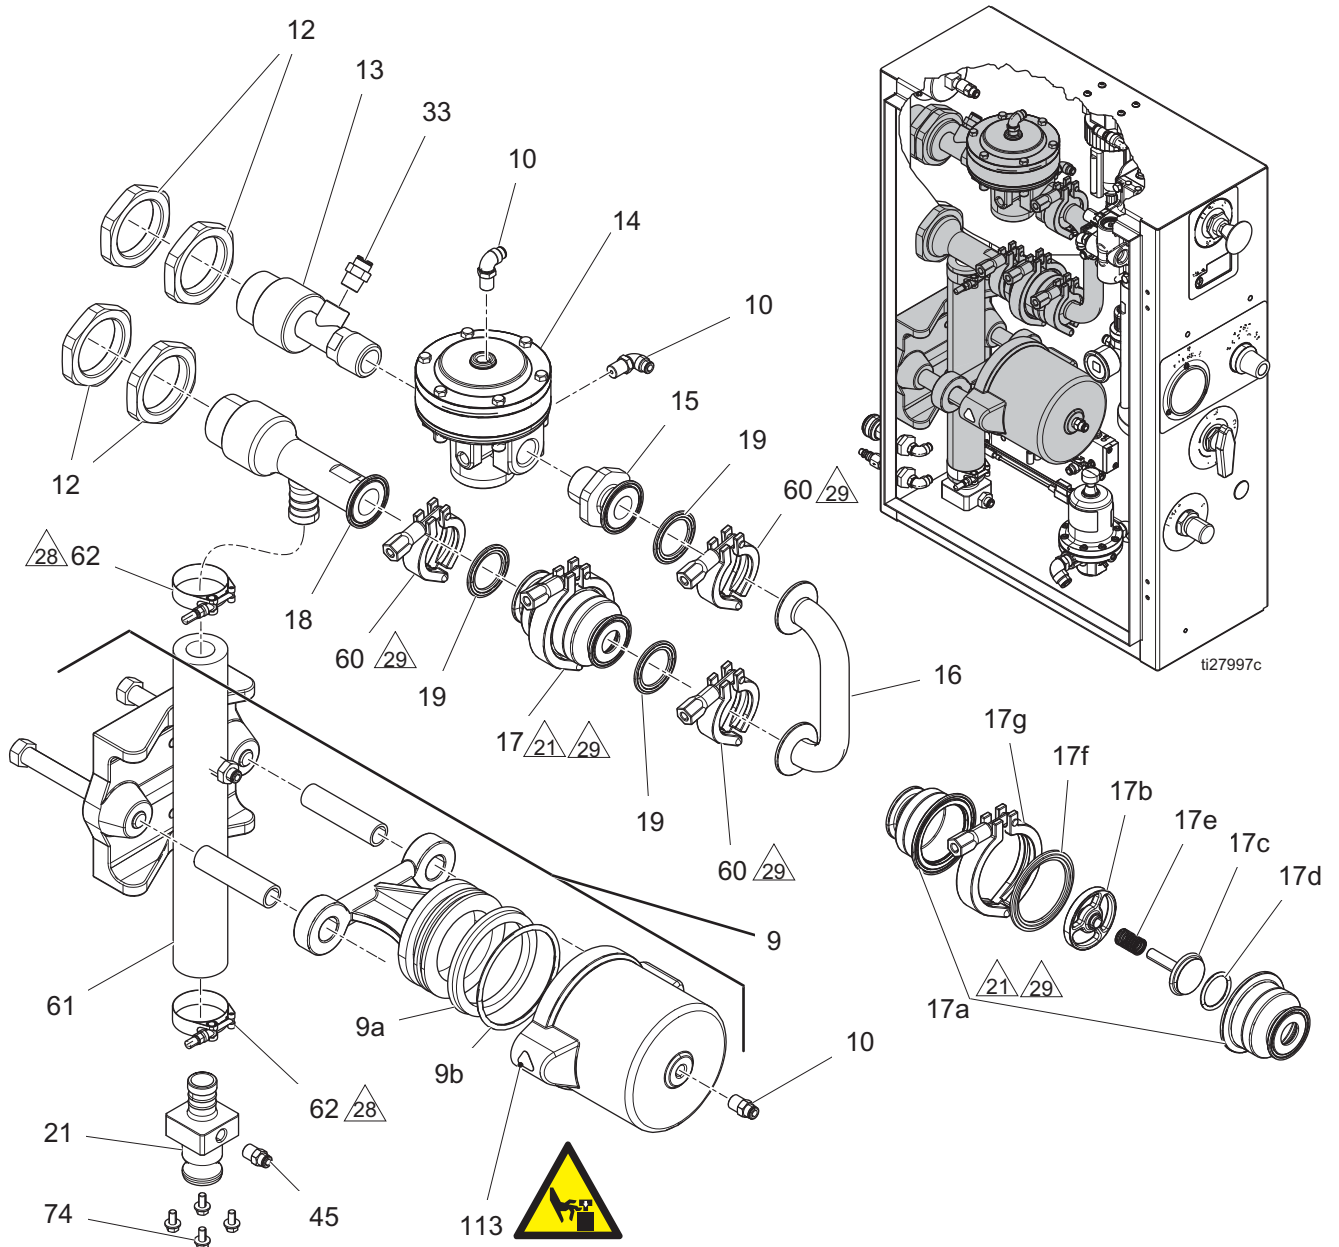

 Assemble valve (17) with plunger facing the bent manifold (16).

 Apply anti-seize to threads on clamp (62). Align the nuts pointing towards the front of the enclosure. Torque nuts to 85 +/- 5 in-lb (9.6 +/- 0.5 N•m).

 Apply anti-seize to threads on clamp (60). Align the nuts pointing towards the front of the enclosure. Torque nuts to 15 +/- 2 ft-lb (20.3 +/- 2.7 N•m).

**Enclosure Parts List (EQm only)**

Ref.	Part	Description	Qty.	Ref.	Part	Description	Qty.
9	17K052	VALVE, pinch	1	18	17G578	MANIFOLD, blast circuit, 1.0, bottom	1
9a	-----	SEAL, wiper	1				
9b	-----	SEAL, o-ring	1	19	680454	GASKET, sanitary fitting	3
10	121022	FITTING, elbow, male, 1/4 npt	3	21	-----	MANIFOLD, slurry, barb/cam-lock	1
12	17G574	NUT, bulkhead, 2-1/4, sst	4	33	128638	FITTING, ptc, straight, 3/8	1
13*	-----	MANIFOLD, blast circuit, 1.0, top	1	45	128637	FITTING, ptc, straight, 1/4	1
14*	-----	REGULATOR, 1 in. pilot operated air	1	60	17L317	CLAMP, tri-clamp, 1.5, hex wing nut	3
15	17F440	ADAPTER, tri-clamp, 1 npt, sst	1	61	17K051	HOSE, pinch	1
16	17G579	MANIFOLD, blast circuit, 1.0, bend	1	62	128642	CLAMP, hose, t-bolt, 1.75-2.00, sst	2
17	-----	VALVE, check, sanitary, 1 in.	1	73	128787	BOLT, button hd, 3/8-16 x 3/4, ss	2
17a	17K050	VALVE, check, 1.0 in., housing	2	74	128504	BOLT, flange hd, serrated, 1/4, ss	4
17b	17L376	VALVE, check, guide	1	113▲	F744	LABEL, warning, ISO pinch hazard	1
17c	17L377	VALVE, check, piston	1				
17d	17L378	VALVE, check, o-ring, 5-pack	1				
17e	17L375	VALVE, check, spring	1				
17f	17L313	GASKET, sanitary, 2-1/2 in.	1				
17g	17L318	TRI-CLAMP, 2-1/2 in.	1				


▲ Replacement Danger and Warning labels are available at no cost.

\* Part included in Kit 19Y367.


# Blast Hoses

## For Use with Mini Electric Plugs


**Electric, 50 ft**  
**26A024 (1.25 in.), 26A074 (1.0 in.)**

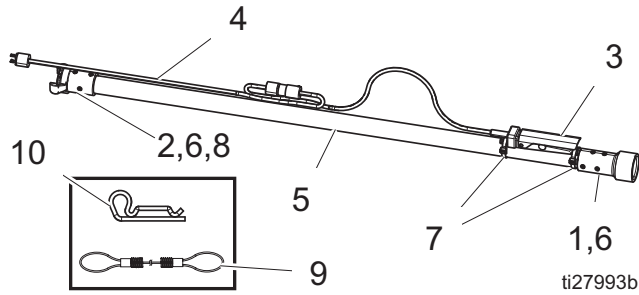


**Electric Extension, 50 ft**  
**26A026 (1.25 in.), 26A076 (1.0 in.)**

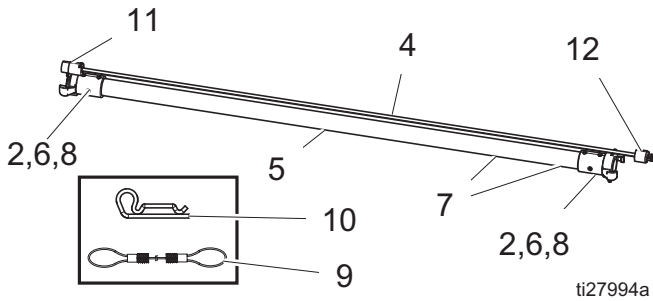

**Pneumatic, 50 ft**  
**26A025 (1.25 in.), 26A075 (1.0 in.)**

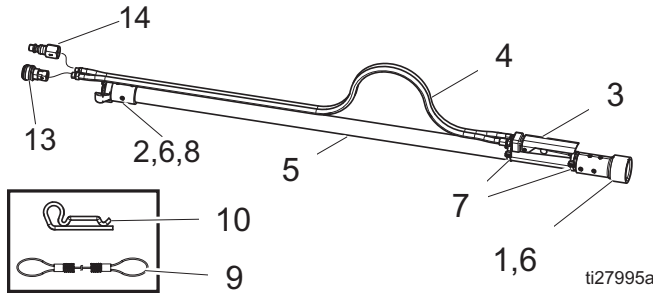


**Pneumatic Extension, 50 ft**  
**26A027 (1.25 in.), 26A077 (1.0 in.)**

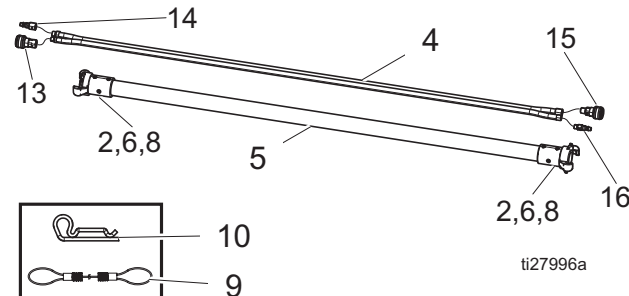


Ref.	Part	Description	Qty.
1	17L274	HOLDER, 1.25 in.	1
	17L276	HOLDER, 1.0 in.	1
2	17L273	COUPLER, 1.25 in.	1
	17L275	COUPLER, 1.0 in.	1
3	17D788	HANDLE, blast control switch, pneumatic	1
	17L331	HANDLE, switch, electric	1
4	24X746	HOSE, pneumatic, control, blast	1
	24X744	HOSE, pneumatic, control, extension	1
	17L471	CABLE, blast control	1
5	17L472	HOSE, blast, 1.25 in. ID	1
	17L473	HOSE, extension, 1.25 in. ID	1
	17L474	HOSE, blast, 1.0 in. ID	1
	17L475	HOSE, extension, 1.0 in ID	1
6	17L476	KIT, screws, flat hd, sst, 8 pk	1
7	17H240	KIT, cable ties, 6 pk	1
8	17C124	GASKET, brass, blast coupler	1
9	17D786	KIT, replacement, whip check	1
10	17D787	KIT, replacement, hairpin, hose	1
11	17L327	CONNECTOR, twist-lock, f	1
12	17L328	CONNECTOR, twist-lock, m	1
13	EQ1336	1/4 QD(f), 1/8 npt(f)	1
14	EQ1421	1/4 QD(m), 1/4 npt(f)	1
15	EQ1813	1/4 QD(f), 1/4 npt(m)	1
16	EQ1823	1/4 QD(m), 1/8 npt(m)	1

**For Use with Standard Electric Plugs**

**Electric, 50 ft**  
**28A024 (1.25 in.), 28A074 (1.0 in.)**

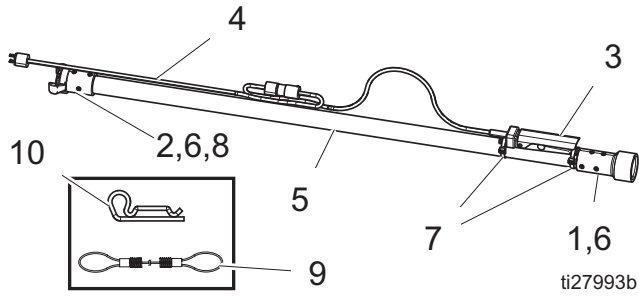

**Electric Extension, 50 ft**  
**28A026 (1.25 in.), 28A076 (1.0 in.)**

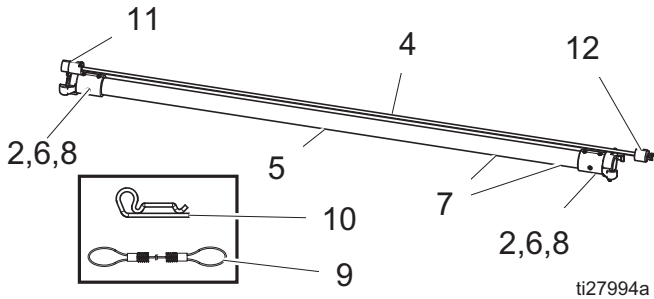

Ref.	Part	Description	Qty.
1	17L274	HOLDER, 1.25 in.	1
	17L276	HOLDER, 1.0 in.	1
2	17L273	COUPLER, 1.25 in.	1
	17L275	COUPLER, 1.0 in.	1
3	17D791	HANDLE, switch, electric	1
4	17F506	CABLE, blast control	1
5	17L472	HOSE, blast, 1.25 in. ID	1
	17L473	HOSE, extension, 1.25 in. ID	1
	17L474	HOSE, blast, 1.0 in. ID	1
	17L475	HOSE, extension, 1.0 in ID	1
6	17L476	KIT, screws, flat hd, sst, 8 pk	1
7	17H240	KIT, cable ties, 6 pk	1
8	17C124	GASKET, brass, blast coupler	1
9	17D786	KIT, replacement, whip check	1
10	17D787	KIT, replacement, hairpin, hose	1
11	EQ1863	CONNECTOR, twist-lock, f	1
12	EQ1864	CONNECTOR, twist-lock, m	1

# Vapor Abrasive Blast Systems and Accessories

## 50 ft (15 m) Blast Hoses with Control Hose/Cable

Part	ID	Blast Control	Electric Plug Type	Coupler 1	Coupler 2	ATEX Approved
26A077	1.0 in.	Pneumatic		2-prong coupler, brass	2-prong coupler, brass	Yes
26A076	1.0 in.	Electric	Mini			No
28A076	1.0 in.	Electric	Standard	No		
26A075	1.0 in.	Pneumatic		Yes		
26A074	1.0 in.	Electric	Mini	Nozzle holder, brass		No
28A074	1.0 in.	Electric	Standard	No		
26A026	1.25 in.	Electric	Mini	2-prong coupler, brass		No
28A026	1.25 in.	Electric	Standard			No
26A027	1.25 in.	Pneumatic		Yes		
26A025	1.25 in.	Pneumatic		Yes		
26A024	1.25 in.	Electric	Mini	Nozzle holder, brass		No
28A024	1.25 in.	Electric	Standard	No		

## 50 ft (15 m) Blast Hoses without Control Hose/Cable

Part	ID	Blast Control	Coupler 1	Coupler 2	ATEX Approved
17L474	1.0 in.	None	Nozzle holder, brass	2-Prong coupler, brass	Yes
17L475	1.0 in.		2-Prong coupler, brass		
17L472	1.25 in.		Nozzle holder, brass		
17L473	1.25 in.		2-Prong coupler, brass		

## Control Hoses/Cable with Blast Hose

Part	Description
24X746	Blast control hose, pneumatic control line, 55 ft, ATEX approved
24X744	Blast control hose, pneumatic control line, 55 ft, extension, ATEX approved
17L471	Blast control cable, electric, 55 ft, mini plug
17F506	Blast control cable, electric, 55 ft, standard plug

## Nozzles

Part	Description	Length	Thread Size
17J859	Nozzle, #7 standard	7.8 in.	50 mm Contractor Thread (2 in. 4-1/2 UNC-2A)
17J860	Nozzle, #8 standard	8.8 in.	
17J861	Nozzle, #10 standard	9.0 in.	
17J862	Nozzle, #12 standard	9.0 in.	
17K898	Nozzle, #6 high performance*	12.0 in.	
17J855	Nozzle, #7 high performance*	12.0 in.	
17J856	Nozzle, #8 high performance*	12.0 in.	
17J858	Nozzle, #10 high performance*	12.0 in.	

\* High performance nozzles require 100 psi (7 bar, 0.7 MPa) or more air pressure at nozzle.

## Other Accessories


Part	Description
17L119	KIT, nozzle gasket (pack of 5)
EQ5166	KIT, nozzle extension, 24 in. (0.6 m)
26A029	KIT, nozzle extension, 24 in. (0.6 m), with handles
17J958	KIT, nozzle pressure verification tool
17K025	KIT, pot strainer
16A002	KIT, water tank, 25 gal (95 L), EQm
17K058	KIT, water dose upgrade
17L316	KIT, garden hose inlet and pressure regulator
24Z005	KIT, inlet ball valve/stainer kit, EQ2 units
25A253	KIT, bull hose, 25 ft
25A254	KIT, bull hose, 50 ft
24Z156	KIT, tool box with insert
17L624	KIT, gaskets, small door
17L625	KIT, gaskets, large door
17D686	KIT, door stay
19Y238	KIT, cable plug upgrade
19Y367	KIT, upper blast circuit standard (mobile)

## Common Spare Parts

Part	Description
17D786	Hose restraint / Whip check
17D787	Blast hose coupler pin kit (6 pack)
17C124	Grommet, hose coupler. Fits either 1.0 in. or 1.25 in. diameter hose
17L309	Gasket, abrasive hose cam lock (10 pack)
17L119	Gasket, blast nozzle (5 pack)
17L313	Blast circuit gasket kit (10 pack)
206994	Throat seal liquid (TSL)
17B186	Pump repair, lower

<b>Part</b>	<b>Description</b>
17L310	O-ring, pop-up
17D790	Gasket, handway
17L333	Pump, inlet filter replacement
EQ1818	Air filter, replacement, inside enclosure
17K051	Pinch hose replacement kit
17L046	Abrasive ball valve replacement
18B069	Standard main air regulator repair kit
18B807PKG	Abrasive ball valve seal repair kit



# Tubing Schematic

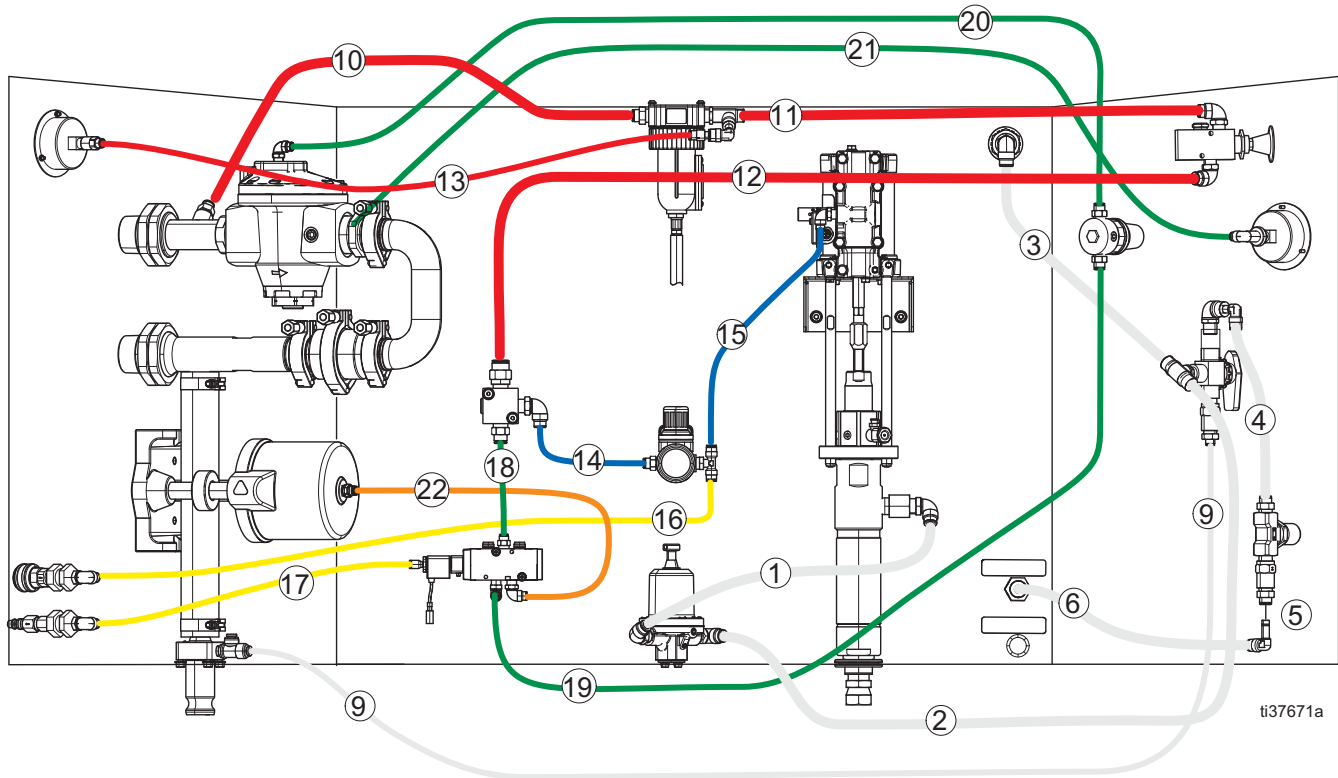

Ref.	Part	Color, Tube Size	Cut Length inches (mm)
1	EQ1273	Natural, 3/8 in. OD	12.25 (311)
2	EQ1273	Natural, 3/8 in. OD	15.5 (394)
3	EQ1273	Natural, 3/8 in. OD	19 (483)
4	EQ1273	Natural, 3/8 in. OD	5.25 (133)
5	EQ1273	Natural, 3/8 in. OD	2.25 (57)
6	EQ1273	Natural, 3/8 in. OD	6 (152)
9	EQ1881	Natural, 1/4 in. OD	24 (610)
10	EQ1297	Red, 3/8 in. OD	10.5 (267)
11	EQ1297	Red, 3/8 in. OD	6.25 (159)
12	EQ1297	Red, 3/8 in. OD	18.75 (476)
13	EQ1882	Red, 1/4 in. OD	9.5 (241)
14	EQ1883	Blue, 1/4 in. OD	7.5 (191)
15	EQ1883	Blue, 1/4 in. OD	21.5 (572)
16	EQ1885	Yellow, 1/4 in. OD	22.5 (572)
17	EQ1885	Yellow, 1/4 in. OD	9.25 (235)
18	EQ1884	Green, 1/4 in. OD	12.5 (318)
19	EQ1884	Green, 1/4 in. OD	23 (584)
20	EQ1884	Green, 1/4 in. OD	23 (584)
21	EQ1884	Green, 1/4 in. OD	18 (457)
22	EQ1296	Orange, 1/4 in. OD	13 (330)

# Dimensions

## EQm Models

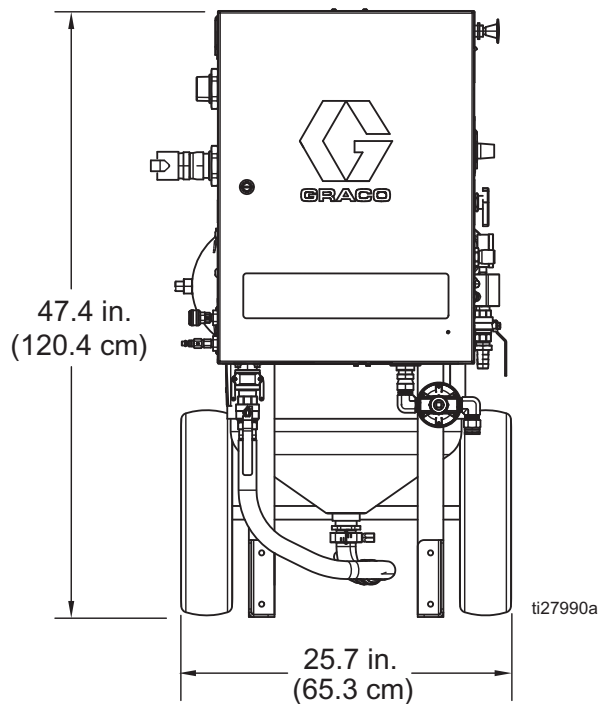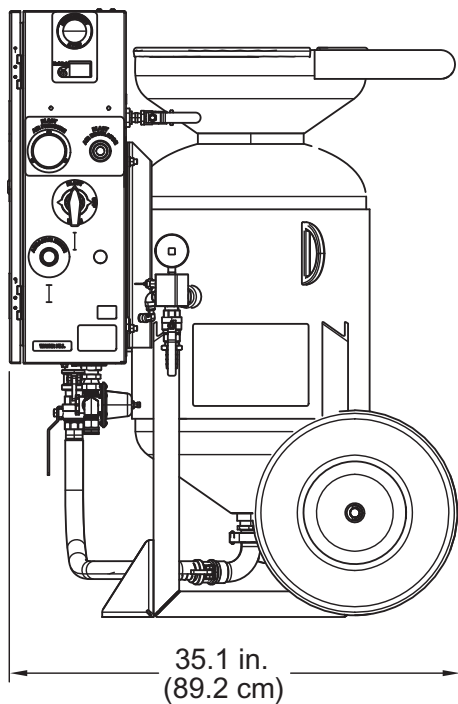



# Technical Specifications

## EQm

<b>EcoQuip 2 EQm</b>		
	<b>US</b>	<b>Metric</b>
Maximum Fluid Working Pressure	175 psi	10.3 bar, 1.03 MPa
Operating Temperature	35°–110° F	1.6°–43.3° C
Recommended Compressor Size+	185–600 CFM	5.3–17 m <sup>3</sup> /min
Blast Hose Size (supplied)	1.25 in. ID	31.75 mm ID
Abrasive Capacity*	440 lb	200 kg
Dry Weight	370 lb	168 kg
Wet Weight*	900 lb	408 kg
Pressure Pot Volume	3.5 cubic feet	99 liters
Air Inlet Connection†	1-1/2 npt	
Water Inlet Connection	3/4 in. garden hose connection	19 mm garden hose connection
*Abrasive capacity and wet weight was found using 80 grit garnet. Using coarser media or less dense media will decrease weight.		
† 2 in. ground boss adapter included in tool box (see Parts section of the EcoQuip 2 manual for more detail).		
<b>Air Supply Hose Minimum ID</b>		
185–600 CFM compressor and less than 100 ft hose length	1.5 in. ID	38 mm ID
Over 600 CFM compressor or greater than 100 ft hose length	2 in. ID	51 mm ID
<b>Sound Data**</b>		
Sound Pressure Level	133 dB(A)	133 dB(A)
Sound Power Level	139 dB(A)	139 dB(A)
Instantaneous Sound Pressure Level	131 dB(C)	131 dB(C)
**All readings were taken at the maximum system blast pressure 150 psi (10.3 bar, 1.03 MPa) from the operator position. The abrasive used was garnet and the substrate was steel. Tested in accordance with ISO 9614-2.		
+ See the Nozzle Selection Guide for information on how to properly select the blast nozzle based on compressor pressure and flow output specifications.		
<b>Notes</b>		
All trademarks or registered trademarks are the property of their respective owners.		

## California Proposition 65

 **WARNING:** This product can expose you to chemicals known to the State of California to cause cancer and birth defects or other reproductive harm. For more information, go to [www.P65warnings.ca.gov](http://www.P65warnings.ca.gov).

 **WARNING:** Breathing diesel engine exhaust exposes you to chemicals known to the State of California to cause cancer and birth defects or other reproductive harm.

- Always start and operate the engine in a well-ventilated area.
- If in an enclosed area, vent the exhaust to the outside.
- Do not modify or tamper with the exhaust system.
- Do not idle the engine except as necessary.

For more information, go to [www.P65warnings.ca.gov/diesel](http://www.P65warnings.ca.gov/diesel).

# Graco Standard Warranty

Graco warrants all equipment referenced in this document which is manufactured by Graco and bearing its name to be free from defects in material and workmanship on the date of sale to the original purchaser for use. With the exception of any special, extended, or limited warranty published by Graco, Graco will, for a period of twelve months from the date of sale, repair or replace any part of the equipment determined by Graco to be defective. This warranty applies only when the equipment is installed, operated and maintained in accordance with Graco's written recommendations.

This warranty does not cover, and Graco shall not be liable for general wear and tear, or any malfunction, damage or wear caused by faulty installation, misapplication, abrasion, corrosion, inadequate or improper maintenance, negligence, accident, tampering, or substitution of non-Graco component parts. Nor shall Graco be liable for malfunction, damage or wear caused by the incompatibility of Graco equipment with structures, accessories, equipment or materials not supplied by Graco, or the improper design, manufacture, installation, operation or maintenance of structures, accessories, equipment or materials not supplied by Graco.

This warranty is conditioned upon the prepaid return of the equipment claimed to be defective to an authorized Graco distributor for verification of the claimed defect. If the claimed defect is verified, Graco will repair or replace free of charge any defective parts. The equipment will be returned to the original purchaser transportation prepaid. If inspection of the equipment does not disclose any defect in material or workmanship, repairs will be made at a reasonable charge, which charges may include the costs of parts, labor, and transportation.

**THIS WARRANTY IS EXCLUSIVE, AND IS IN LIEU OF ANY OTHER WARRANTIES, EXPRESS OR IMPLIED, INCLUDING BUT NOT LIMITED TO WARRANTY OF MERCHANTABILITY OR WARRANTY OF FITNESS FOR A PARTICULAR PURPOSE.**

Graco's sole obligation and buyer's sole remedy for any breach of warranty shall be as set forth above. The buyer agrees that no other remedy (including, but not limited to, incidental or consequential damages for lost profits, lost sales, injury to person or property, or any other incidental or consequential loss) shall be available. Any action for breach of warranty must be brought within two (2) years of the date of sale.

**GRACO MAKES NO WARRANTY, AND DISCLAIMS ALL IMPLIED WARRANTIES OF MERCHANTABILITY AND FITNESS FOR A PARTICULAR PURPOSE, IN CONNECTION WITH ACCESSORIES, EQUIPMENT, MATERIALS OR COMPONENTS SOLD BUT NOT MANUFACTURED BY GRACO.** These items sold, but not manufactured by Graco (such as electric motors, switches, hose, etc.), are subject to the warranty, if any, of their manufacturer. Graco will provide purchaser with reasonable assistance in making any claim for breach of these warranties.

In no event will Graco be liable for indirect, incidental, special or consequential damages resulting from Graco supplying equipment hereunder, or the furnishing, performance, or use of any products or other goods sold hereto, whether due to a breach of contract, breach of warranty, the negligence of Graco, or otherwise.

## FOR GRACO CANADA CUSTOMERS

The Parties acknowledge that they have required that the present document, as well as all documents, notices and legal proceedings entered into, given or instituted pursuant hereto or relating directly or indirectly hereto, be drawn up in English. Les parties reconnaissent avoir convenu que la rédaction du présente document sera en Anglais, ainsi que tous documents, avis et procédures judiciaires exécutés, donnés ou intentés, à la suite de ou en rapport, directement ou indirectement, avec les procédures concernées.

## Graco Information

For the latest information about Graco products, visit [www.graco.com](http://www.graco.com).

For patent information, see [www.graco.com/patents](http://www.graco.com/patents).

TO PLACE AN ORDER, contact your Graco distributor or call to identify the nearest distributor.

Phone: 612-623-6921 or Toll Free: 1-800-328-0211, Fax: 612-378-3505

**Distributed By:**



Cleveland 1-800-362-9267

Canton 1-877-258-7601

Toledo 1-800-860-3352

[www.chasehipps.com](http://www.chasehipps.com)

*All written and visual data contained in this document reflects the latest product information available at the time of publication. Graco reserves the right to make changes at any time without notice.*

Original instructions. This manual contains English. MM 3A3489

**Graco Headquarters:** Minneapolis

**International Offices:** Belgium, China, Japan, Korea

**GRACO INC. AND SUBSIDIARIES • P.O. BOX 1441 • MINNEAPOLIS MN 55440-1441 • USA**  
**Copyright 2020, Graco Inc. All Graco manufacturing locations are registered to ISO 9001.**

[www.graco.com](http://www.graco.com)  
Revision R, August 2020